INSTRUCTION MANUAL

FOR

REGULATED POWER SUPPLIES

LLS-9000 SERIES

MP MASTER
MA28687

This manual provides instructions intended for the operation of the Lambda power supplies, and is not to be reproduced without the written consent of Lambda Electronics. All information contained herein applies to all LLS-9000 series models unless otherwise specified.

LAMBDA ELECTRONICS MELVILLE, N.Y.
MAIN PLANT TELEPHONE: (516) 694-4200

IM-LLS-9000

INSTRUCTION MANUAL

FOR

REGULATED POWER SUPPLIES

LLS-9000 SERIES

This manual provides instructions intended for the operation of the Lambda power supplies, and is not to be reproduced without the written consent of Lambda Electronics. All information contained herein applies to all LLS-9000 series models unless otherwise specified.

LAMBDA ELECTRONICS MELVILLE, N.Y.

MAIN PLANT TELEPHONE: (516) 694-4200

IM-LLS-9000

7/89

TABLE OF CONTENTS

Section	Page
SPECIFICATIONS AND FEATURES	1
OPERATING INSTRUCTIONS	6
Controls and Fuses	6
Connections	7
Basic Modes of Operation and Operating Procedures	8
Operation as a Constant Voltage Source	8
Operation as a Constant Current Source	10
Other Modes of Operation	11
Adjustment of Overvoltage Control R226	12
Operation After Protective Device Shutdown	13
MAINTENANCE	14
General	14
Periodic Maintenance	14
Trouble Analysis	14
Checking Transistors and Capacitors	14
Printed Circuit Board Maintenance Techniques	15
Trouble Chart	15
Performance Checks	19
Power Supply Calibration Procedure	20
Calibration of Output-Voltage-Range Controls R202 and R223	20
Calibration of Output-Current-Range Controls R204 and R264	20
Calibration of Vo(meas) adjust R210	21
Calibration of Io(min) measure R632 and Io(max) measure R634	21
SERVICE	21
PARTS ORDERING	22

SPECIFICATIONS AND FEATURES

(Specifications apply for all models)

DC OUTPUT – Voltage and Current regulated for line and load.

TABLE 1

VOLTAGE AND CURRENT RATINGS

MODEL	VOLTAGE RANGE (volts)	MAXIMUM CURRENT (AMPS) AT AMBIENT TEMPERATURE			
		40°C	50°C	60°C	70°C
LLS-9008	0 to 8	100A	90A	78A	57A
LLS-9018	0 to 18	45A	40A	33A	25A
LLS-9040	0 to 40	20A	18A	15A	11A
LLS-9060	0 to 60	14A	12A	10A	8A
LLS-9120	0 to 120	7A	6A	5A	4A

Current range must be chosen to suit appropriate ambient temperature.
Current ratings apply for entire voltage range.

REGULATED VOLTAGE OUTPUT

Regulation (line) ..... 0.05% of Vo(max) for input changes from 85 - 132 or 170 - 265 volts AC.

Regulation (load) ..... 0.05% of Vo(max) from 0 to full load.

Ripple and noise ..... (20 MHZ measurement bandwidth)
5 millivolts rms, 35 millivolts peak-to-peak on models LLS-9008 and LLS-9018.

10 millivolts rms, 75 millivolts peak-to-peak on models LLS-9040 and LLS-9060.

20 millivolts rms, 150 millivolts peak-to-peak on model LLS-9120.

Overshoot ..... No overshoot at turn on, turn off or power failure.

REGULATED VOLTAGE OUTPUT (Cont'd)

Negative Offset Voltage	Power supplies are shipped from the factory with minimum output calibrated to 0 +/- 10 millivolts. Internal calibration is available to achieve up to -0.1V negative offset, if desired.
Temperature Coefficient	0.03% per degree C.
Stability (drift)	0.1% per 8 hour period after 30 minute warmup.
Remote programming:	
External Resistor	Adjustable from 1000 ohms per volt to 200 ohms per volt (Rp terminal to -V).
Programming voltage	One to one voltage change (RP terminal to -V).
	Zero to 5 Volt signal from RVP terminal (TB202-2) to Common terminal (TB202-6) programs output from 0 to Vo(max). (Common terminal is approximately at the same potential as +V)
Remote Sensing	Provision is made for remote sensing to eliminate effect of power output lead resistance on DC regulation.

REGULATED CURRENT OUTPUT (AUTOMATIC CROSSOVER):

Regulation (line)	0.3% Io(max) for input changes from 85 - 132 volts AC or 170 - 265 volts AC.
Regulation (load)	0.3% Io(max) for output voltage changes from Vo(max) to short circuit.
Current range	Specifications apply for 5% to full load current.
Voltage range	As shown in Table 1.
Ripple	1% Io(max) - rms.
Remote programming	Zero to 5 V signal from RCP terminal (TB202-4) to Common terminal (TB202-6) programs output from 0 to Io(max). (Common terminal is approximately at the same potential as +V.)

AC INPUT

Line voltage	85 - 132 volts AC (47-63Hz) or 170 - 265 volts AC (47 - 63Hz) via rear panel selector switch.
Input power	1100 watts max.
Input RMS current	17.5 Amperes max.

AC INPUT (Cont'd)

Efficiency	72.5% minimum on 8V model, 75% minimum on 18 and 40V models, 77.5% minimum on 60 and 120V models; at full output power.
Input surge protection	Meets IEEE 587-1980 for branch circuits and outlets (class A).
Inrush limiting	Power-up inrush current will not exceed 40 Amps peak.
EMI	Conducted spectrum conforms with requirements of FCC Docket 20780 Class A (85-132 VAC input) and VDE 0871 Class A (170 - 250 VAC input).

PARALLEL OPERATION - LLS-9000 units of the same rated output voltage can be paralleled in a master/slave arrangement.

SERIES OPERATION - LLS-9000 units of the same rated output voltage can be connected in series with auto-tracking so that both units will track to a common reference.

OVERLOAD PROTECTION

Thermal	Internal airflow sensing circuit shuts down unit's operation if air inlet blockage or fan rotor lockup occurs. When a thermal shutdown occurs, the main oscillator's operation will be terminated and all internal bias supplies, and the fan, will shut down. In addition, a front panel fault indicator light will turn on. AC power must be removed for approximately 60 seconds to reset the shutdown circuit.
Electrical Input	20A/250V Normal Blo fuses F101 and F102 protect AC input circuitry. 10A/250V Normal Blo fuse F103 protects printed circuit board from damage in the case of internal component failures.
Output	Automatic constant-current-limiting circuit limits the output current to a customer adjustable value (0% to full load), thereby providing protection for the load as well as the power supply. In addition, there is an internal inverter peak-current-limit circuit which protects the power supply during load transients.

OVERVOLTAGE PROTECTION

All LLS-9000 models include a built-in adjustable overvoltage protection circuit which prevents damage to the load caused by excessive power supply output voltage. Exceeding the overvoltage set point will shut down the unit's operation and cause the front panel fault indicator to light up. AC power must be removed from the unit for approximately 60 seconds to reset the OV shutdown circuit.

Overvoltage Adjustability Range	Model LLS-9008:	4 to 11 VDC.
	Model LLS-9018:	4 to 24 VDC.
	Model LLS-9040:	8 to 50 VDC.
	Model LLS-9060:	8 to 70 VDC.
	Model LLS-9120:	20 to 130 VDC.

REMOTE TURN-ON / TURN-OFF - A TTL low signal (0 to 0.5V), or a short, between Remote on/off terminal (TB202-5) and common terminal (TB202-6) enables the output. A TTL high (2.8 to 5V), or open circuit, between the Remote on/off terminal and the common terminal will bring the output voltage to zero.

COOLING - Forced-air cooling using ball-bearing, long-life fan (no lubrication needed). Fan draws air in through front portion of chassis and exhausts air through perforations at rear of unit. Leave adequate clearance at all air intake and exhaust openings.

OPERATING AMBIENT TEMPERATURE RANGE AND DUTY CYCLE - Continuous duty from 0 to 71°C ambient with corresponding load current ratings for all modes of operation and appropriate derating.

STORAGE TEMPERATURE (Non-operating) -- -55°C to +85°C

INPUT / OUTPUT CONNECTIONS

AC input	Two-terminal, heavy-duty recessed terminal block with cover. Accepts No. 8 ring-or spade-type lug. Line cord should be chosen to be compatible with maximum expected ambient temperature of application.
Line safety ground	No. 8-32 tapped hole and screw in chassis by AC input terminal block.
DC output	8- and 18-volt units: Bus bars. 40-60-and 120-volt units: heavy duty printed-circuit-board-mounted terminal block with clear plastic cover.
DC sensing, Remote voltage programming, Remote current programming, Remote on/off, Remote resistance programming, Parallel operation	Rear panel, printed-circuit-board-mounted lugless connector (TB 202 - 13 positions).

CONTROLS

DC output	Numerical keypad on front panel allows adjustability of either constant voltage or constant current limit points. Resolution of programmed voltage: 10mV on models LLS-9008 and LLS-9018; 100mV on models LLS-9040, LLS-9060 and LLS-9120. Resolution of programmed current: 1A on model LLS-9008; 100mA on models LLS-9018, LLS-9040, LLS-9060 and 10mA

CONTROLS (Cont'd)

DC output (cont)

on model LLS-9120. Accuracy of programmed value versus delivered output: ±2% or 3 counts, whichever is greater.

Standby Control ..... Allows for zero output without losing last programmed values for voltage and current.

On/Off Switch ..... Rocker switch located on front panel.

Overvoltage control ..... Multi-turn, screwdriver-adjust potentiometer located on front panel.

METERS - Front panel 3 1/2 digit voltmeter and 3 digit ammeter simultaneously monitor output voltage and current. Accuracy of metered value versus delivered output: ±2% or 3 counts, whichever is greater.

CONSTANT VOLTAGE/CONSTANT CURRENT INDICATORS - Located on Front Panel. These displays indicate whether power supply is operating as a constant voltage source or is in current limit.

MOUNTING - One mounting surface. Mounting position not restricted.

PHYSICAL DATA

Size ..... 4-9/32" x 8" x 12-7/8"

Weight ..... 14.5 lbs net; 19 lbs shipping

Finish ..... Light Gray, FED.STD.595, No 26622

ISOLATION RATINGS

Input to output ..... 3750 Volts rms

Output to ground ..... 500 Volts rms

Input to ground ..... 1500 Volts rms.

WARRANTY - 3 years, parts and labor.

ACCESSORIES

Rack Adapter system ..... LRA-15, -17, -18.

Rack mounting kit.

Cable system.

Lambda MATE or GPIB systems.

OPERATING INSTRUCTIONS

CONTROLS, FUSES AND INDICATORS

Front Panel On/Off Switch. Located on front panel is an On/Off switch which controls the application of input power to the supply. The switch activates an internal relay which, when the switch is in the off position (labeled "O" on the switch), disconnects the input circuit from both sides of the AC line.

Front Panel Programmer. The front panel numerical keypad serves to program both the constant voltage and constant current limit points. Starting with the most significant digit, keying in the desired value followed by an "ENTER" keystroke will institute a new operating limit for either output voltage or current limit, as determined by the programming mode indicators. The programming mode can be switched from voltage to current via the "VOLTAGE/CURRENT" key which functions as a pushbutton toggle.

During a new programming key-in sequence, the front panel digital meter will present the keyed-in value of voltage or current until the "ENTER" key is depressed. Once this occurs, the meter will revert back to measurement mode and present the output voltage or current delivered by the supply. In the event of a programming instruction not being followed by an "ENTER" command, the meter will automatically revert back to measurement mode after approximately ten seconds. The value of the non-entered programming instruction is then lost and any new programming instructions must be started from the most significant digit onwards. At any point during a programming instruction key-in, the meter can be reset back to measurement mode and the programming instruction discarded by depressing the "C/E" key.

If an entered programming instruction is not compatible with the rated output voltage or current of the power supply, the appropriate meter will display an "Err" message and the program instruction will not be carried out. Depressing the "C/E" key, or waiting approximately ten seconds, will reset the meter back to measurement mode.

At any time during operation of the power supply the programmed value of voltage or current can be displayed by momentarily depressing the "ENTER" key. This will change the appropriate front panel meter, as denoted by the programming mode indicator, to display the last programmed value for voltage or current for a period of approximately two seconds. After this time the meter will automatically revert back to measurement mode. Care should be exercised when performing this check so as not to depress the "ENTER" key for more than one second for this will institute the "Slew Down" function, as described below.

The output voltage or current limit points can be ramped up, or down, by utilizing the "Slew Up" or "Slew Down" arrow controls. Depressing the "Up" arrow will cause the output voltage or current (as denoted by the programming mode indicator) to ramp up at a rate which will increase with the length of time that the key is depressed. Similarly, depressing the "Down" arrow (which also serves as the "ENTER" key) will cause the programmed value for either voltage or current to decrease at a rate which will increase with the length of time that the key is depressed.

The output voltage of the supply can be brought to zero, without losing the last programmed values of voltage or current (which is the case when power is switched off), by utilizing the "STANDBY" key. Depressing the "STANDBY" key once will bring the output voltage to zero. Depressing the "STANDBY" key a second time will reinstate the last programmed values of voltage and current. Programmed values of either voltage or current can be changed while the unit is in standby.

Operating mode indicators. Included on the front panel are a pair of Operating Mode indicators which report on whether the power supply is operating as a constant voltage source, or is in current limit. If the output current of the supply is below the programmed value for constant current, the operating mode indicator under the voltmeter will illuminate to indicate that the unit is not in current limit. If the load connected to the supply is of low enough impedance to draw a current which reaches the programmed current limit point, the unit will crossover into constant current and the operating mode indicator under the ammeter will illuminate.

Fault Indicator. Also included on the front panel is a "FAULT" indicator which will illuminate if either an overvoltage or airflow interruption shutdown occur. When the fault indicator illuminates, all other displays on the panel will go dark.

Overvoltage Control. This is a multi-turn, screwdriver-adjust potentiometer located on the front panel. Rotation of this control will vary the overvoltage limit-point from the minimum specified value (fully CCW) to the maximum specified value (fully CW).

Fuses F101, F102. These are 20A/250V Normal-Blo fuses located in series with the hot line. These fuses protect the power supply from excessive overcurrents in the event of an internal component failure. NOTE: POWER SHOULD BE REMOVED FROM THE UNIT BEFORE ANY CHECKING OR REPLACEMENT OF FUSE IS ATTEMPTED.

Fuse F103. This is a 10A/250V normal-blo fuse located in series with the main inverter current path. This fuse protects printed circuit board traces in this circuit in the event of an internal component failure. NOTE: POWER SHOULD BE REMOVED FROM THE UNIT BEFORE ANY CHECKING OR REPLACEMENT OF THIS FUSE IS ATTEMPTED.

Line Select Switch S101. This is a screwdriver actuated switch which is accessible through a hole in the rear of the unit. Selection of input voltage range (85-132 or 170-265 VAC) should only be performed with AC power removed from unit.

CONNECTIONS

AC Input. AC input connection should be made using a line cord compatible with maximum expected voltage, current and ambient temperature. Wires should be terminated with No. 8 ring or spade lugs.

DC Output. Load connections must be made to output bus bars (8- & 18-volt units), or to two-position terminal block TB201 (40- through 120-volt units). (This block is designed to handle the maximum current and voltage attainable from the supply and will accept a No. 8 Ring-or Spade-type lug.)

Sensing. Terminals for sensing output voltage are located on TB202, and are terminals 10 and 12. Local sensing can be achieved by strapping terminal 10 to terminal 11 (connects to +V) and terminal 12 to terminal 13 (connects to -V). See figure 3.

Remote Voltage Programming, Remote Current Programming, Remote On/Off, Remote Resistance Programming, Parallel Operation. Terminals for achieving these functions are located on TB202, pins 1 through 9. See modes of operation and operating procedures for details. TB202 is a lugless-type connector which will accept up to an AWG No. 20 stripped wire. Shipped with the unit are a number of ring-type solder lugs which can be utilized if multiple wires are to be connected to TB202 positions.

Load Ground Connection. This power supply can be operated with either the positive or negative terminal grounded, or with neither terminal grounded. The line safety ground tapped hole in the chassis at the rear of the unit can be utilized for grounding one of the output terminals, if desired.

> NOTE: When operating the supply with neither output terminal grounded, high impedance leakage resistance and capacitance paths can exist between the power supply circuitry and chassis ground.

BASIC MODES OF OPERATION AND OPERATING PROCEDURES

This power supply is designed to operate as a constant-voltage source or as a constant-current source. Automatic crossover to either mode of operation occurs when load conditions change as follows:

Constant Voltage. The power supply will function as a constant-voltage source while the load current is less than the current value I_{LIM} as set by the front panel current-limit programming generator, or, where applicable, by the external current programming signal applied to the RCP terminal. When the load current I_L ($=Vo/R_L$) reaches I_{LIM}, the supply will crossover automatically and will operate as a constant current source. Further decrease in the value of the load resistor will result in a decrease of voltage across the load while the current remains regulated to I_{LIM}.

Constant Current. The power supply will function as a constant-current source while the load voltage V_L does not exceed the voltage value set by the front panel constant voltage programming generator, or, where applicable, by the external programming signal applied to either the RVP terminal or the Rp terminal. When the load resistance is high enough so that the load voltage Vo ($=I_L \times R_L$) reaches the value set by the programming controls, the supply will automatically crossover and operate as a constant voltage source.

Power Up and Front Panel Initial Settings. Upon initiation of AC power, the front panel constant voltage and constant current generators will be preset to deliver zero output voltage along with a current limit point corresponding to the 40°C rating of the supply, plus 2%. Immediately following power on, the front panel meters will display these programmed values for approximately two seconds before reverting to measurement mode.

To deliver voltage after power up, the desired operating voltage must be entered through the numeric keypad, or the "Slew Up" arrow can be utilized. It should be noted that when the power supply is switched off via the front panel switch, the last entered programming values of voltage and current will be lost. When the power supply is switched back on again, it will power up as described above. If an application requires that power be interrupted to a load, and a quick return to the pre-existing programmed values of voltage and current is desired, the front panel "STANDBY" control can be utilized.

OPERATION AS A CONSTANT-VOLTAGE SOURCE

The output impedance and regulation of the power supply at the load may change when using the supply as a constant-voltage source and connecting leads of practical length are used. To minimize the effect of the output leads on these characteristics, remote sensing can be used. Recommended types of supply-load connections, with local or remote sensing, are described in the following paragraphs.

Local Sensing Connection, Figure 3. Local sensing is the connection suitable for applications with relatively constant load where extremely close load regulation over the full rated current excursion is not required at the load.

Remote Sensing Connection, Figure 4. Remote sensing provides complete compensation for the DC voltage drop in the connecting cables. Sensing leads should be a twisted pair to minimize AC pickup. A 2.5UF capacitor may be required between the output terminals and sense terminals to reduce noise pick-up.

SAFETY NOTICE

DANGEROUS VOLTAGES EXIST IN THIS EQUIPMENT. OBSERVE THE USUAL SAFETY PRECAUTIONS WHEN OPERATING OR SERVICING THE EQUIPMENT TO AVOID SHOCK OR INJURY.

CONSTANT-VOLTAGE OPERATION, INTERNAL PROGRAMMING, ADJUSTABLE CURRENT LIMIT

When shipped from the factory, the supply is ready for use as a constant-voltage/constant-current source with automatic crossover. Initial programmed points for constant voltage and constant current are as described in the previous text. Jumpers are in place for local voltage sensing, figure 3. If remote-sensing connection is desired, the load should be wired as shown in figure 4. It should be noted that the front panel voltmeter measures the voltage at the rear power terminals and may not accurately reflect voltage at the load in remote sense applications.

Determine load requirements and select wire size from figures 1 and 2.

After applying input power, output voltage can be adjusted to any desired value via the front panel numerical keypad programmer. The current limit point can be adjusted by setting the "PROGRAM MODE" indicator to "AMPS" via the "VOLTAGE/CURRENT" key and then keying in the desired current limit value, followed by an "ENTER" keystroke.

Programmed Constant-Voltage Operation Using a Zero to 5-Volt External Source. The power supply output voltage can be programmed via an external zero to 5-volt source by utilizing the RVP terminal on TB202. The jumper between terminals TB202-1 and -2 should be removed and the external source connected between terminals TB202-2 and -6 (figure 5). Note that terminal 6 is at a voltage slightly higher than that of +V and that any external source connected to terminal 6 must be electrically isolated from both +V and -V. Consult your Lambda sales representative or the factory for applications which require remote programming from sources referenced to +V or -V. The constant-voltage operating point will be directly proportional to the external voltage, with zero output voltage corresponding to zero programming and rated output voltage +2% corresponding to 5 volts programming. Remote versus local sensing and current limit set point adjustment are explained in the preceding text.

Programmed Constant-Voltage Operation Using An External Resistor. The power supply output voltage can be programmed via an external resistor by utilizing the Rp terminal on TB202. The external resistor should be connected between TB202 terminal 9 and -V, while the -S terminal (TB202 terminal 12) is not connected (figure 6).

The value of the external resistor can be chosen to either 200 ohms per volt (nominal) or 1000 ohms per volt (nominal) by presetting the voltage from RVP terminal TB202-2 to common terminal TB202-6 via the front panel programmer. A 5-volt potential between these terminals

corresponds to 200 ohms per volt (nominal) and can be achieved by programming the front panel to full scale voltage (Vo(RATED)+2%). A 1-volt potential between these terminals corresponds to 1000 ohms per volt (nominal) and can be achieved by programming the front panel to 20.4% of the rated voltage. It should be noted that this programmed value must be re-entered every time AC power is applied to the power supply.

In order to protect any external shorting contact made between Rp and -V from seeing excessive current during a programming-down execution, an internal resistor is connected in series with the Rp terminal that limits the maximum peak current out of the Rp terminal to 1 Amp. This resistor will cause a small offset voltage to be present at the output terminals. This offset voltage will range from approximately +0.05 volts on model LLS-9008, set at 200 ohms per volt, to +0.5 volts on model LLS-9120, set at 200 ohms per volt. The magnitude of this offset voltage can be limited by increasing the ohms-per-volt utilized in the application. For example, on model LLS-9008, the offset becomes approximately +0.01 V, set at 1000 ohms per volt, and on model LLS-9120 it becomes approximately +0.1 V, set at 1000 ohms per volt. Remote versus local sensing and current limit set point adjustment are as described above under Constant-Voltage operating procedures.

Programmed Constant Voltage Operation Using a One-To-One External Voltage Source Referenced to -V. The power supply output voltage can be programmed via an external one-to-one voltage by utilizing the Rp terminal on TB202. The external voltage source should be connected between Rp terminal (TB202-9) and -V, while leaving -S terminal (TB202-12) disconnected (figure 7). In addition, terminals 7 and 8 should be open circuited.

The external source should be current limited to no more than 20mA in order to protect internal components in the LLS unit.

In order to limit peak currents in the Rp terminal to approximately one amp during programming up and programming down transients, an internal resistor is included in series with the Rp terminal. Remote versus local sensing and current-limit-set-point adjustment are as described above under Constant Voltage operating procedures.

OPERATION AS A CONSTANT-CURRENT SOURCE

In this mode of operation, when the load voltage increases, due to changing load resistance, to the limit of the front panel constant voltage setting, the power supply crossover circuit will cause the unit to operate as a constant-voltage supply.

SAFETY NOTICE

DANGEROUS VOLTAGES EXIST IN THIS EQUIPMENT. OBSERVE THE USUAL SAFETY PRECAUTIONS WHEN OPERATING OR SERVICING THE EQUIPMENT TO AVOID SHOCK OR INJURY.

Constant-Current Operation, Internal Programming, Adjustable Voltage Limit. When shipped from the factory, the supply is ready for use as a constant-voltage/constant-current source with automatic crossover. Operating points for constant current and constant voltage are as described in the previous text.

Determine load requirements and select wire size from figures 1 and 2.

After applying power, output current and maximum voltage limit point can be adjusted to any desired value via the front panel numerical keypad.

Programming Constant-Current Operation Using a Zero-to-5 Volt External Source. The power supply output current-limit can be programmed via an external zero-to-5 volt source by utilizing the RCP terminal on TB202. The jumper between terminals TB202-3 and -4 should be removed and the external source should be connected between terminals TB202-4 and -6 (figure 8). Note that terminal 6 is at a voltage slightly higher than that of +V and that any external source connected to terminal 6 must be electrically isolated from both +V and -V. Consult your Lambda sales representative or the factory for applications which require remote programming from sources referenced to +V or -V. The constant-current operating point will be directly proportional to the external voltage, with zero output corresponding to zero programming and full-rated output-current at 40°C +2% corresponding to 5 volts programming. Maximum voltage-limit set-point is as described above.

OTHER MODES OF OPERATION

TTL Compatible Remote Turn-On/Turn-Off. A TTL compatible remote turn-on/turn-off function is available by utilizing terminal 5 of TB202. A TTL low signal (0 to 0.5 Volts) or a short between terminal 5 and terminal 6 of TB202 enables the output voltage. A TTL high (2.8 to 5 Volts), or open circuit between terminal 5 and terminal 6 of TB202 will cause the output voltage to go to zero, see figure 9. It should be noted that terminal 6 (common) is at a voltage slightly higher than +V, thus any TTL signal must be electrically isolated from +V and -V.

Parallel Operation. The output current capability of LLS-9000 power supplies can be increased by connecting supplies of the same output voltage rating in parallel. The supplies can be operated in a MASTER/SLAVE configuration by using the circuit shown in figure 10. The jumper between terminals 7 and 8 of TB202 on the SLAVE unit must be removed, and a connection must be added from terminal TB202-6 of the MASTER unit to terminal TB202-9 of the SLAVE unit. In addition, a jumper should be added between TB202 terminals 6 and 10 of the SLAVE unit. Note that constant-current specifications do not apply in parallel operation.

Series Operation. The voltage capability of LLS-9000 power supplies can be extended by series operation of two power supplies of equal voltage ratings. A maximum of 500 volts can be connected between either the +V or -V terminal and chassis ground. Figure 11 shows the connection for this series operation.

Diodes CR_A and CR_B, which protect the units from carrying excessive current in the event of one unit not being powered up (i.e., fan not operational), must be capable of withstanding the maximum rated-current.

For master/slave operation with auto tracking, TB202 terminals 7 and 8 of the slave unit are disconnected from one another. Also, an external resistor, Rx, is connected from terminal TB202-10 of the master unit to terminal TB202-9 of the slave unit. The value of Rx is 1600 Ω for model LLS-9008, 3600 Ω for model LLS-9018, 8000 Ω for model LLS-9040, 12,000 Ω for model LLS-9060 and 24,000 Ω for model LLS-9120. Due to the existence of certain tolerances, the value of Rx required for perfect tracking may vary slightly from the nominal values given here. In addition, Rx must be able to dissipate up to 0.04 watts on model LLS-9008, 0.09 watts on model LLS-9018, 0.2 watts on model LLS-9040, 0.3 watts on model LLS-9060 and 0.6 watts on model LLS-9120.

Utilization of Remote Features and Implications on Output Noise. When various remote features of the power supply are utilized (such as remote voltage programming, remote current programming, remote TTL compatible on/off or remote resistance programming), or when power supplies are utilized in parallel or series combinations, output ripple and noise may be

slightly degraded due to high-frequency spikes caused by noise radiated thru wires connected to terminals 1 through 9. Normally, the amplitude and spectral content of these spikes is such that a small decoupling capacitor connected at the remote load-distribution-point will adequately attenuate any noise pickup. However, in extremely sensitive applications, where spikes cannot be tolerated, radiated noise emanating from wires connected to terminals 1 through 9 can be minimized by utilizing high-frequency-rated ferrite noise suppressors on each of the externally connected signal wires. In order to be effective, these noise suppressors must be physically located on the signal wire at a point no further than 3 inches from where the wire connects to the power supply terminals. These noise suppressors can either be obtained from your local Lambda sales office or by contacting the factory. Figures 15 and 16 detail the use of these noise suppressors.

These suppressors are built into the unit for the +S and -S terminals and no external suppressors are required to minimize noise radiation while using remote sensing.

ADJUSTMENT OF FRONT PANEL OVERVOLTAGE CONTROL

The overvoltage protection circuit provides an adjustable means of shutting down the power supply if the output voltage exceeds a pre-determined safe value. In the event of an overvoltage shutdown, the main power oscillator is disabled along with all output bias supplies and the fan supply. A front panel indicator light will turn on to indicate a fault condition. Once the cause of the overvoltage has been determined and removed, the shutdown circuit can be reset by removing AC power to the unit for approximately 60 seconds.

The procedure for setting the overvoltage control is as follows:

(The power supply should be removed from associated equipment, be at an ambient temperature of 25-30°C and operated at nominal line voltage.)

1. The recommended voltage protection point is 115% of the selected power supply operating voltage or 1.5 volts above the selected operating voltage, whichever is greater. (If set too low, load-off transients may cause the overvoltage detection circuit to trip.)

2. Turn the OV adjust control fully clockwise.

3. Apply AC power to the unit and adjust the output voltage to the desired protection point. If the power supply does not have adequate output range to reach this point omit steps 4 and 5, and proceed to step 6.

4. Slowly rotate the OV adjust control CCW while monitoring the output voltage. When the front panel meters go dark and the front panel fault indicator light comes on, the OV shutdown point has been reached.

5. The voltage protection point is now set. Remove power from the unit for approximately 60 seconds to reset the shutdown circuit. When power is switched back on, the initial programmed points for voltage and current will be as described under POWER UP and FRONT PANEL INITIAL SETTINGS.

6. If the power supply adjustment range is not adequate to reach the desired OV protection point, proceed as follows:

   (a) Adjust the power supply output to the normal operating voltage.

(b) Slowly turn the OV adjust control R226 CCW until the front panel meters go dark and the front panel fault light comes on.

(c) Refer to the chart below, select the appropriate volts/turn ratio and turn the OV adjust control clockwise by the number of turns equivalent to 15% of the operating voltage (or 1.5 volts, whichever is greater) to bring the OV set-point to the proper value.

MODEL	NOMINAL VOLTS PER TURN (R226)
LLS-9008	0.7
LLS-9018	2.1
LLS-9040	4.3
LLS-9060	6.2
LLS-9120	11

OPERATION AFTER PROTECTIVE DEVICE SHUTDOWN

Thermal Shutdown. The thermal shutdown circuit will activate if any interruption to normal cooling airflow occurs (such as a blocked air inlet or fan rotor lockup). When a thermal shutdown occurs, the main oscillator circuit will be inhibited, thereby bringing the supply output to zero, causing the front-panel fault-indicator to light. In order to reset the unit after a thermal shutdown, first determine and remove the cause(s) of airflow interruption, and then remove power from the unit for at least 60 seconds, if the unit has already cooled down. (If the unit is not cooled down, remove power for up to 2 minutes immediately subsequent to a thermal-shutdown occurrence).

Fuse Shutdown. Fuses will blow when the maximum rated current value for the fuses are exceeded. Fatigue failure of fuses can occur when mechanical vibrations from the installation combine with thermally induced stresses to weaken the fuse metal. Many fuse failures are caused by a temporary condition and replacing the blown fuse will make the fuse-protected circuit operative.

NOTE: Power should be removed from the unit before checking or replacing any fuse.

Overvoltage Shutdown. When the power supply output increases above the overvoltage limit, the overvoltage protection circuit will shut down the main oscillator's operation, thereby causing the output voltage to go to zero. During overvoltage shutdown, front panel meters will go dark and the rear panel fault indicator lamp will be lit. After eliminating the cause(s) for overvoltage, resume operation of the power supply by interrupting the AC input circuit for a period of at least 60 seconds. (refer to TROUBLESHOOTING CHART).

MAINTENANCE

GENERAL

This section describes trouble analysis routines, replacement procedures and calibration and test procedures that are useful for servicing this Lambda power supply. A trouble chart is provided as an aid for the troubleshooter. Refer to the section on SPECIFICATIONS AND FEATURES for minimum performance standards.

PERIODIC MAINTENANCE

The unit should be disconnected from associated equipment and inspected for dust accumulation due to forced-air cooling. Inspect every six months or more often if operated in extremely dusty environments. To inspect the interior of the unit, first disconnect AC input power to the unit and then remove the top cover by removing the 6 screws securing the cover. If the unit shows any dust accumulation, it should be vacuumed clean in order to assure proper heat-sink efficiency.

TROUBLE ANALYSIS

Whenever trouble occurs, systematically check all fuses, primary power lines, external circuit elements, and external wiring for malfunction before troubleshooting the equipment. Failures and malfunctions often can be traced to simple causes such as improper jumper and supply-load connections or fuse failure due to metal fatigue.

Use the electrical schematic diagram and block diagram, figure 14, as an aid to locating trouble causes. The schematic diagram contains various circuit voltages that are averages for normal operation. Measure these voltages using the conditions for measurement specified on the schematic diagram. Use measuring probes carefully to avoid causing short circuits and damaging circuit components.

CHECKING TRANSISTORS AND CAPACITORS

Check transistors with an instrument that has a highly limited current capability. Observe proper polarity for PNP or NPN transistors to avoid error in measurement. The forward transistor resistance is low but never zero; backward resistance is always higher than the forward resistance.

For good transistors, the forward resistance for any junction is <u>always</u> greater than zero.

Do not assume trouble is eliminated when only one part is replaced. This is especially true when one transistor fails, causing other transistors to fail. Replacing only one transistor and turning power on, before checking for additional defective components could damage the replaced component.

When soldering semi-conductor devices, wherever possible, hold the lead being soldered with a pair of pliers placed between the component and the solder joint to provide an effective heat sink.

> <u>NOTE</u>: The leakage resistance obtained from a simple resistance check of a capacitor is not always an indication of a faulty capacitor. In all cases the capacitors are shunted with resistances, some of which have low values. Only a dead short is a true indication of a shorted capacitor.

PRINTED CIRCUIT BOARD MAINTENANCE TECHNIQUES

1. If foil is intact but not covered with solder, it is a good contact. Do not attempt to cover with solder.

2. Voltage measurements can be made from either side of the board. Use a needle-point probe to penetrate to the wiring whenever a protective coating is used on the wiring. A brass probe can be soldered to an alligator clip adapted to the measuring instrument.

3. Whenever possible, use a heat sink when soldering transistors.

4. Broken or damaged printed wiring is usually the result of an imperfection, strain, or careless soldering. To repair small breaks, tin a short piece of hook-up wire to bridge the break, and holding the wire in place, flow solder along the length of wire so that it becomes part of the circuitry.

5. When unsoldering components from the board, never pry or force loose the part; unsolder the component by using the wicking process described below:

(a) Select a 3/16 inch tinned copper braid for use as a wick; if braid is not available, select AWG No. 14 or No. 16 stranded wire with 1/2 inch insulation removed.

(b) Dip the wick in liquid rosin flux.

(c) Place the wick onto the soldered connection and apply soldering iron onto the wick.

(d) When sufficient amount of solder flows onto the wick, freeing the component, simultaneously remove iron and wick.

NOTE: When dealing with surface-mount-technology parts, devices with two leads can be removed with a pair of tweezers and a soldering iron first by heating both ends of the device until the solder is melted and then by quickly removing the part with the tweezers. Replacement first requires pre-wetting the mounting pads with a small amount of solder and then holding the new part in place with the tweezers. First one end of the part is heated and then the other end is heated to the point where the solder melts and flows onto the part, thereby forming new solder joints. Care should be exercised to avoid damaging the part(s) because of accidential overheating or mechanical stress.

Removal or repair of SMT devices, which have more than two leads is best left to SMT repair stations specifically designed to handle removal and installation of these parts using special tools and techniques.

TROUBLE CHART

The trouble chart is intended as a guide for locating trouble causes and is used along with the schematic diagram.

The operating conditions assumed for the trouble chart are as follows:

(a) AC power of proper voltage and frequency is present at input terminals.

(b) Power supply is connected for constant voltage with local sensing.

SAFETY NOTICE

DANGEROUS VOLTAGES, DUE TO CHARGED CAPACITORS, MAY EXIST IN THIS EQUIPMENT EVEN IF AC POWER IS REMOVED. OBSERVE NORMAL SAFETY PRECAUTIONS WHEN SERVICING.

TROUBLESHOOTING CHART

Symptom	Probable Cause	Remedy
1. Zero volts DC output (with front panel programmed for maximum voltage and current.)	Short circuit across output of supply	Check load connections. Correct as necessary.
Additional Symptoms		
A. OV/OT fault indicator light on.	Overvoltage fault	See manual section on procedure for setting OV adjust.
	Overtemperature fault	Check for locked rotor on fan. Check for air inlet blockage.
B. Front panel operational.	Panel not programmed properly	See manual section on procedure for programming front panel.
C. Front panel operational. 5 volts measured from RVP to common and from RCP to common. Zero or negative voltage from IC208 pin 7 to common.	IC204, IC205 or IC208 defective. CR216 open.	Check and replace as necessary.
D. Front panel operational. 5V measured from RVP and RCP to common. Greater than 5V from IC208 pin 7 to common.	IC306, 307, 309, Q311 defective.	Check and replace as necessary.
	CR314, 318, 320, 324 open. C310, 326 shorted.	Check and replace as necessary.
E. Front panel operational. RVP or RCP to common do not measure 5V.	Front panel circuitry defective.	See section of TROUBLESHOOTING CHART referring to front panel.
	Open circuit at remote on/off terminal TB202-5.	Checkout wiring. Correct as necessary.
	IC211 or IC215 defective.	Check and replace as necessary.
F. Front panel not operational.	Ribbon cable from J202 to front panel is disconnected.	Check and repair as necessary.

TROUBLESHOOTING CHART (Cont'd)

Symptom	Probable Cause	Remedy
Zero output continued:		
G. Front panel not operational Ribbon to J202 ok.	Front panel circuitry defective. IC203 defective.	See section on TROUBLE-SHOOTING CHART referring to front panel. Check and replace as necessary.
H. RVP to common or RCP to common do not measure 5V. Fan not operational. Output of bias regulators IC201 and IC202 not +/-12V (respectively). Inputs ok.	IC201, IC202 defective.	Check and replace as necessary.
I. Same as above, except inputs of IC201/202 not correct.	Oscillator circuit not operational.	See below.
	CR317, 316, 319, defective.	Check and replace as necessary.
J. Front panel not operational. F101, F102, F103 not blown. No oscillator waveform at Q102.	IC301, 302, defective, Q305 shorted. D301 defective.	Check and replace as necessary.
K. F101 or F102 blown, F103 ok.	CR101, C105-C110 shorted.	Check and replace as necessary.
L. F101, F102 or F103 blown.	Q301-304 shorted.	Check and replace as necessary.
2. High output voltage, no control of output.	Open sense lead.	Refer to appropriate connection diagram and correct as required.
3. Unit cannot be adjusted to attain rated V_o or I_o or minimum output.	Unit out of calibration	Refer to CALIBRATION PROCEDURES in manual and recalibrate unit in the proper sequence.
4. Unit will not program down to zero output.	IC303, 304, 305, Q307-310 defective.	Check and replace as necessary.

TROUBLESHOOTING CHART - FRONT PANEL

Symptom	Probable Cause	Remedy
1. Front panel display dark. Power supply operational (fan running).	Ribbon cable from J202 to front panel disconnected.	Check and repair as necessary.
	Ribbon cable J602 to J501 disconnected.	Check and repair as necessary.
Additional Symptoms		
A. 5 volts not measured from pin 3 of IC601 (micro-controller) to TP2.	IC203 (+5V Regulator) defective.	Check and repair as necessary.
B. 5 volts measured from pin 3 of IC601 to TP2.	IC601 defective.	Check and replace as necessary.
2. Panel will not program to rated output.	Power supply out of calibration	Refer to CALIBRATION procedure and recalibrate unit in proper sequence.
	Front panel not initialized properly	Refer to chart below for proper S601 settings.
	IC605 (D to A converter), IC608 (buffer amplifier) defective.	Check and replace as necessary.
3. Panel will not measure voltage or current properly.	Power supply out of calibration	Refer to CALIBRATION procedure and recalibrate unit in proper sequence.
	Front panel not initialized properly	Refer to chart below for proper S601 settings.
	IC605 (D to A converter), IC607 (switched capacitor interface). IC609 (current signal amplifier), IC610 (measurement comparator) defective.	Check and replace as necessary.

FRONT PANEL INITIALIZATION - S601 SWITCH SETTINGS

MODEL	S601 BIT									
	1	2	3	4	5	6	7	8	9	10
LLS 9008	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	*	*
LLS 9018	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	*	*
LLS 9040	OFF	ON	OFF	ON	ON	OFF	ON	OFF	*	*
LLS 9060	ON	ON	OFF	OFF	ON	ON	OFF	OFF	*	*
LLS 9120	OFF	OFF	ON	OFF	OFF	ON	ON	ON	*	*

* Bits 9 and 10 should be on for all models except during calibration of the front panel, when they both should be off.

PERFORMANCE CHECKS

Checks With Constant Voltage Operation. Check the ripple and regulation of the power supply using the test connection diagram shown in figure 12. Use suggested test equipment or equivalent to obtain accurate results. Refer to SPECIFICATIONS AND FEATURES for minimum performance standards.

Load regulation can be checked by varying the load from no-load to full-load while monitoring the output voltage. Line regulation can be measured by varying the input with a variac between low line and high line while observing the output voltage. Good technical judgement should be observed in the routing and layout of test leads to minimize AC pickup.

Output ripple should be measured directly at the power output terminals of the power supply. A 20 MHz bandwidth oscilloscope should be used. In order to minimize pick up from close proximity radiated fields, the length of the ground wire on the scope probe should be minimal. A true RMS voltmeter similar to a FLUKE 8920A should be used to measure RMS output ripple.

Checks With Constant Current Operation. Check the regulation of the power supply using the test connection diagram shown in figure 13. Refer to SPECIFICATIONS AND FEATURES FOR minimum performance standards.

Load regulation can be checked by switching from a short circuit to a maximum output voltage condition while monitoring the output current via the current-measuring shunt. Line regulation can be measured by varying the input line with a variac while monitoring the output current via a current-measuring shunt. In order to measure the relatively small regulation signal, a shunt of sufficiently large voltage drop should be used.

Constant current RMS ripple should be measured by connecting a true RMS voltmeter across the current measuring shunt. A low-pass filter comprised of a resistor and capacitor may be required to filter out high frequency noise spikes due to shunt inductance and pickup.

POWER SUPPLY CALIBRATION PROCEDURE

The following is a list of calibration controls located within the LLS-9000 power supply:

R202	Vo(min) adjust
R223	Vo(max) adjust
R204	Io(min) adjust
R264	Io(max) adjust
R210	Vo(meas) adjust
R632	Io(min) meas adjust
R634	Io(min) meas adjust

Calibration of R202 must always be performed together with that of R223. Calibration of R204 must always be performed together with that of R264. Calibration of R632 must always be performed together with that of R634.

Before performing any calibrations, the power supply must be removed from associated equipment and must be at an ambient of 25 to 30°C. Unit must be wired in local sense with internal programming, figure 3, and must be operating from a nominal AC line.

Calibration of Output-Voltage-Range Controls R202 and R223.

1. With no load on the output of the power supply, program the front panel voltage programmer for zero.

2. While monitoring the output voltage with an external DVM, adjust R202 so that V_o is between -.01 and +.01 volts.

> NOTE: In certain applications it may be desirable to have the minimum output less than zero volts. This can be achieved by adjusting R202 CCW until the minimum output goes down to the desired value, with a -0.1V absolute minimum.

3. Program the front panel voltage programmer for the rated output voltage of the supply.

4. Adjust R223 until the output voltage monitored from +V to -V with an external DVM indicates the rated output voltage of the supply +/-.01 volts.

5. Seal R202 and R223 with RTV sealant.

Calibration of Output-Current-Range Controls R204 and R264.

1. With no load on the output of the power supply, program the front panel current programmer for zero.

2. Apply a short-circuit through a measurement shunt connected across the output of the supply, figure 13.

3. Adjust R204 until the measured output current measured via the external shunt is between -0.01 and +0.01 amps.

4. Program the front panel current programmer for the rated 40°C output current of the supply.

5. Adjust R264 until the monitored output current measured via the external shunt is the rated 40°C current of the supply +/-.01%.

6. Seal R204 and R264 with RTV sealant.

Calibration of Vo(meas) adjust R210.

1. With AC power removed from the supply, set bits 9 and 10 of S601, located on front panel P.C. board F, to the OFF position.

2. Apply power to the unit. Program for rated output voltage with no load connected at the output.

3. Adjust R210 until the reading presented by the front panel voltmeter corresponds with that of an external DVM connected to the output.

4. Remove power to the supply. Reset bits 9 and 10 of S601 to the ON position. Seal R210.

Calibration of Io(min) measure R632 and Io(max) measure R634.

1. With AC power removed from the supply, set bits 9 and 10 of S601, located on front panel P.C. Board F, to the off position.

2. Apply power to the unit. With no load connected at the output, monitor the voltage between test points TP1 and TP2 located at the top of front panel P.C. Board F. Adjust R632 (potentiometer located closest to the top of the P.C. Board F) so that the voltage between TP1 and TP2, as measured with an external DVM, is between +0.01 and -0.01 volts. Seal R632.

3. Apply a short circuit across the output terminals of the supply through a current measurement shunt.

4. Program the supply for rated voltage and rated current.

5. Adjust R634 so that the reading presented by the front panel ammeter agrees with that of the external shunt. Seal R634.

6. Remove power to the unit. Reset bits 9 and 10 of S601 to the ON position.

SERVICE

When additional instructions are required or repair service is desired, contact the nearest Lambda office where trained personnel and complete facilities are ready to assist you.

Please include the power supply model and serial number together with complete details of the problem. On receipt of this information Lambda will supply service data or advise shipping for factory repair service.

All repairs not covered by the warranty will be billed at cost and an estimate forwarded for approval before work is started.

PARTS ORDERING

Standard components and special components in the Lambda power supply can be obtained from the factory. In case of emergency, critical spare parts are available through any Lambda office.

The following information must be included when ordering parts:

1. Model number and serial number of power supply and purchase date.

2. Lambda part number.

3. Description of part together with circuit designation.

4. If part is not an electronic part, or is not listed, provide a description, function and location of the part.

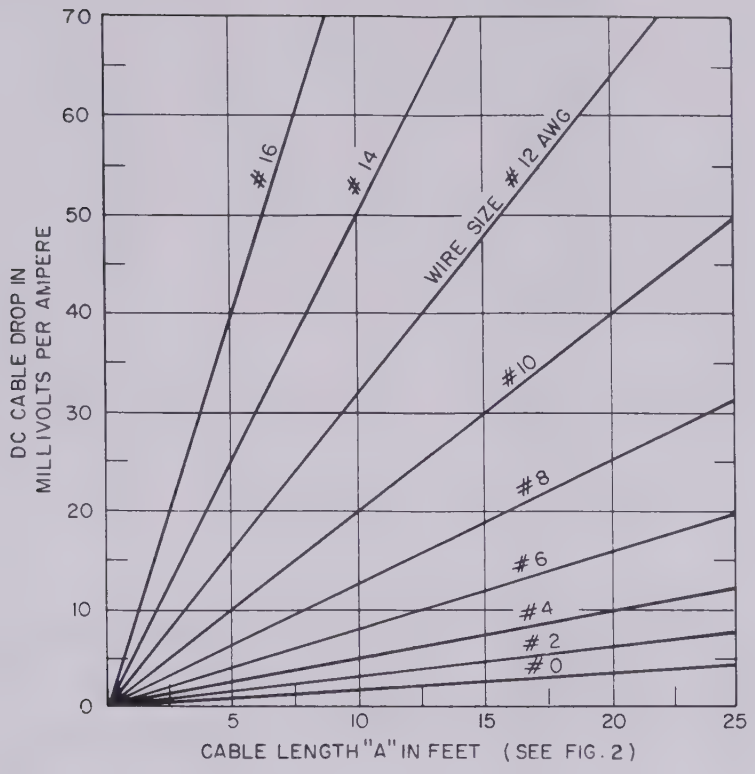

Figure 1. Cable Connection Chart.

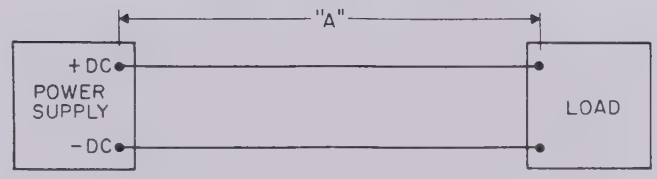

Figure 2. Cable Length "A" in Feet.

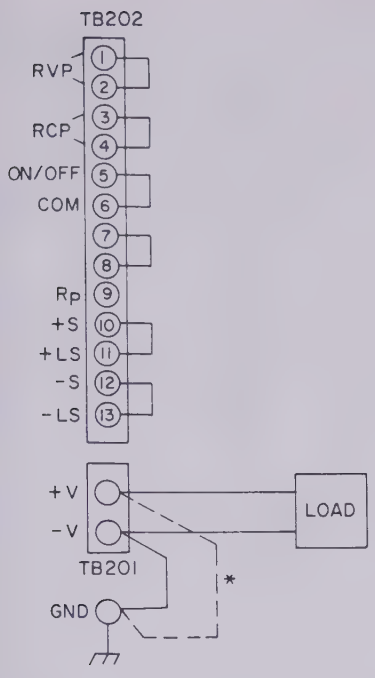

NOTE:
* FOR POSITIVE GROUND, DISCONNECT JUMPER FROM -V TO GND AND RECONNECT FROM +V TO GND.

Figure 3. Local Sensing Connection.

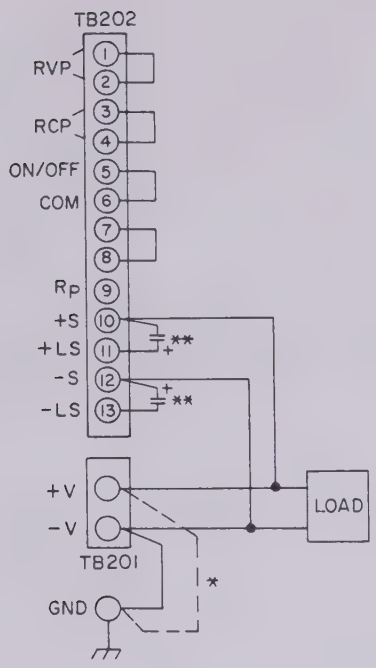

NOTE:
* FOR POSITIVE GROUND, DISCONNECT JUMPER FROM -V TO GND AND RECONNECT FROM +V TO GND.
** A 2.5MF, ELECTROLYTIC CAP. MAYBE REQUIRED.

Figure 4. Remote Sensing Connection.

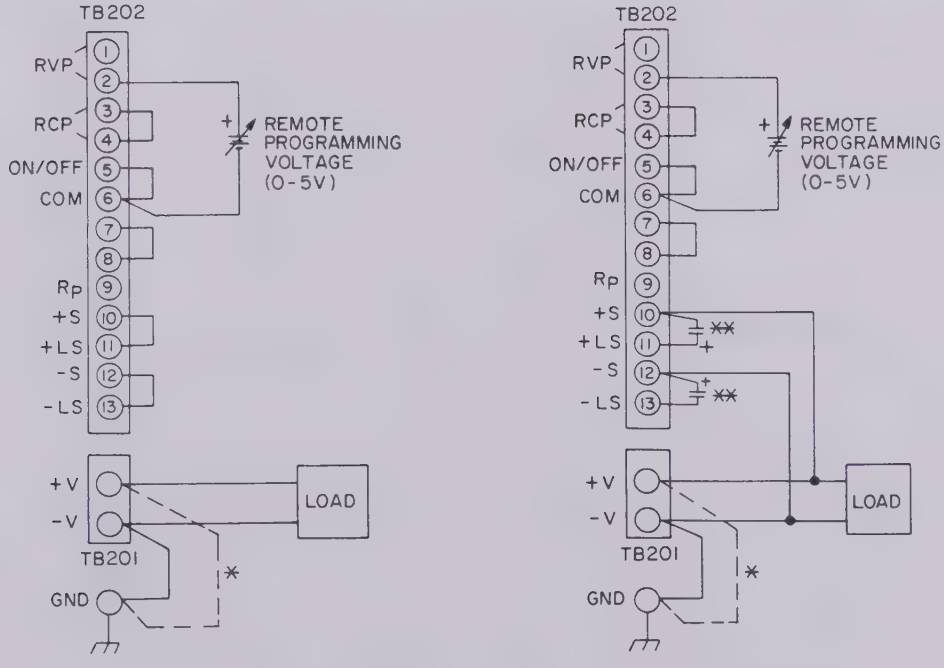

NOTE:
* FOR POSITIVE GROUND, DISCONNECT JUMPER FROM -V TO GND AND RECONNECT FROM +V TO GND.
** A 2.5MF ELECTROLYTIC CAP. MAY BE REQUIRED.

Figure 5. Programmed Constant Voltage Using a Zero to 5V External Source.

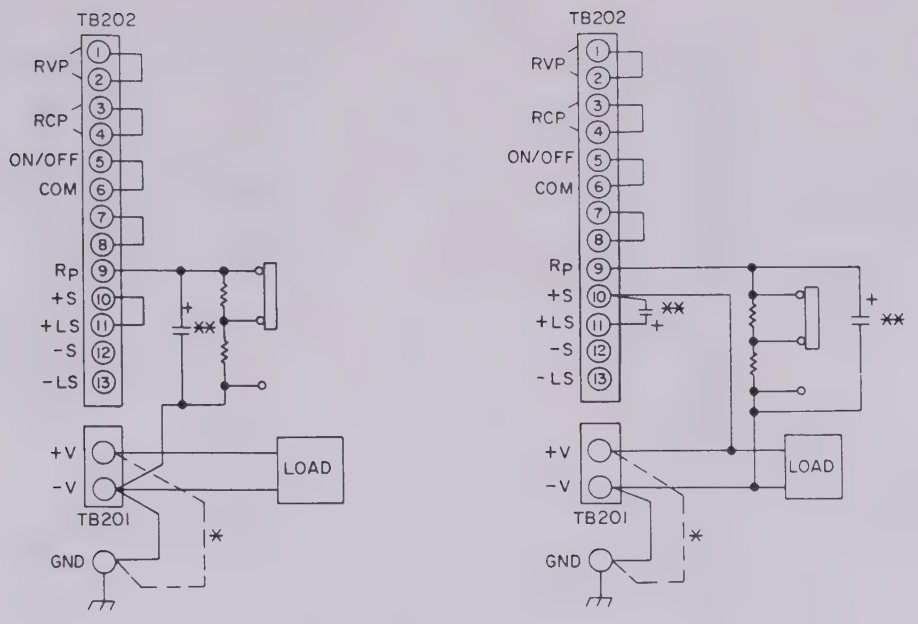

NOTE:
* FOR POSITIVE GROUND, DISCONNECT JUMPER FROM -V TO GND AND RECONNECT FROM +V TO GND.
** A 2.5UF ELECTROLYTIC CAP. MAY BE REQUIRED.

Figure 6. Programmed Voltage Using an External Resistor.

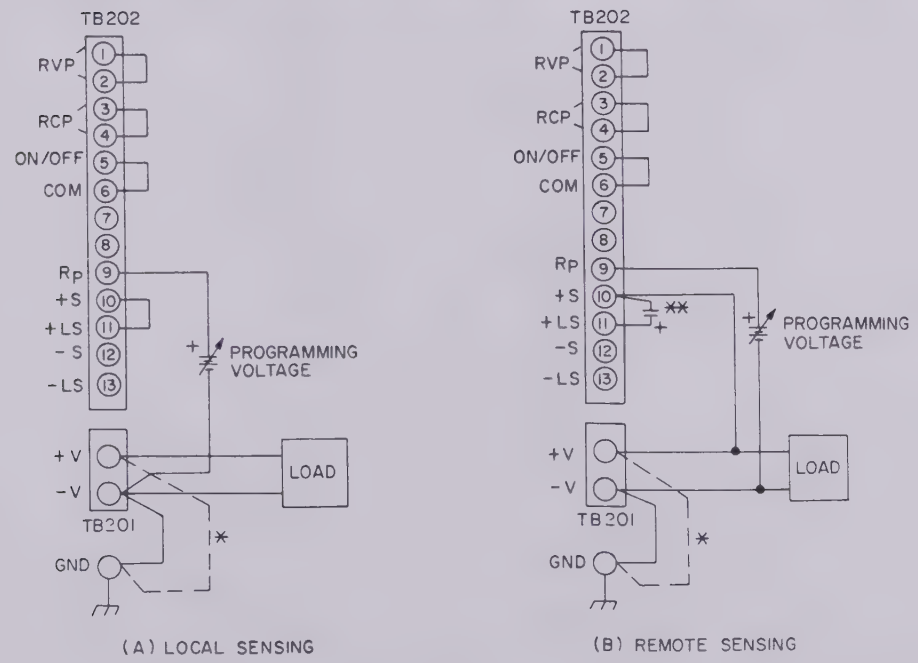

NOTE:
* FOR POSITIVE GROUND, DISCONNECT JUMPER FROM -V TO GND AND RECONNECT FROM +V TO GND.
** A 2.5MF, ELECTROLYTIC CAP. MAY BE REQUIRED.

Figure 7. Programmed Voltage Using an External Voltage Source Referenced to -V.

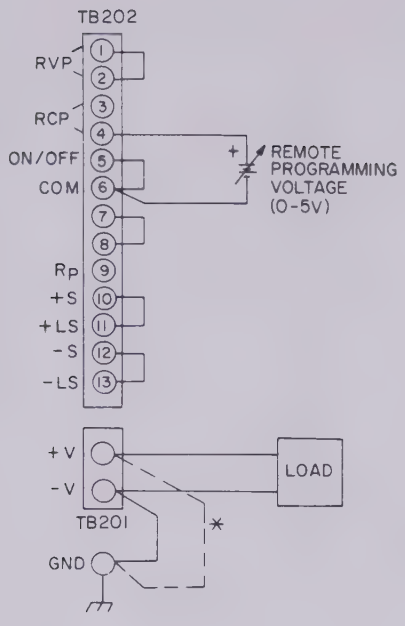

NOTE:
* FOR POSITIVE GROUND, DISCONNECT JUMPER FROM -V TO GND AND RECONNECT FROM +V TO GND.

Figure 8. Programmed Constant Current with a Zero to 5V External Source.

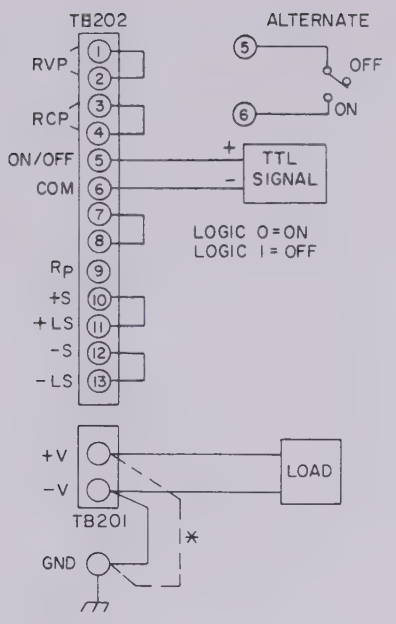

NOTE:
* FOR POSITIVE GROUND, DISCONNECT JUMPER FROM -V TO GND AND RECONNECT FROM +V TO GND.

Figure 9. TTL Compatible Remote On/Off.

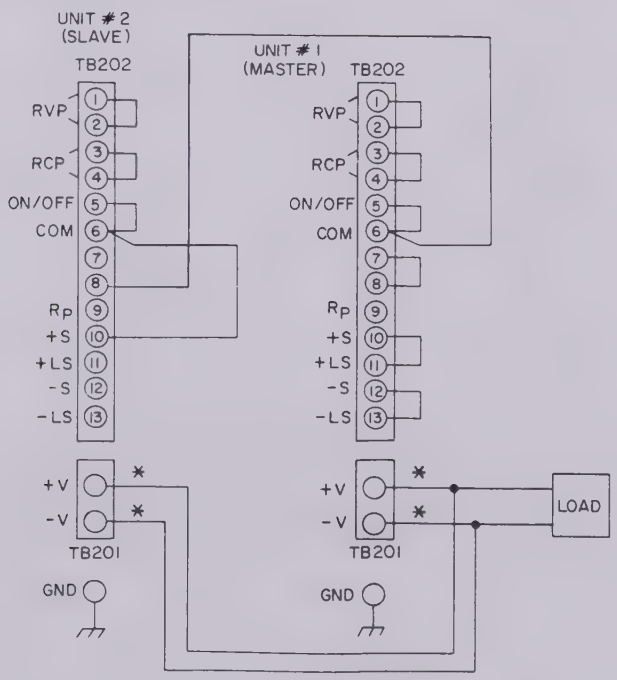

NOTE: * VOLTAGE DROP ON THESE WIRES SHOULD BE BALANCED TO PROVIDE FOR PROPER CURRENT SHARING.

Figure 10. Parallel Operation.

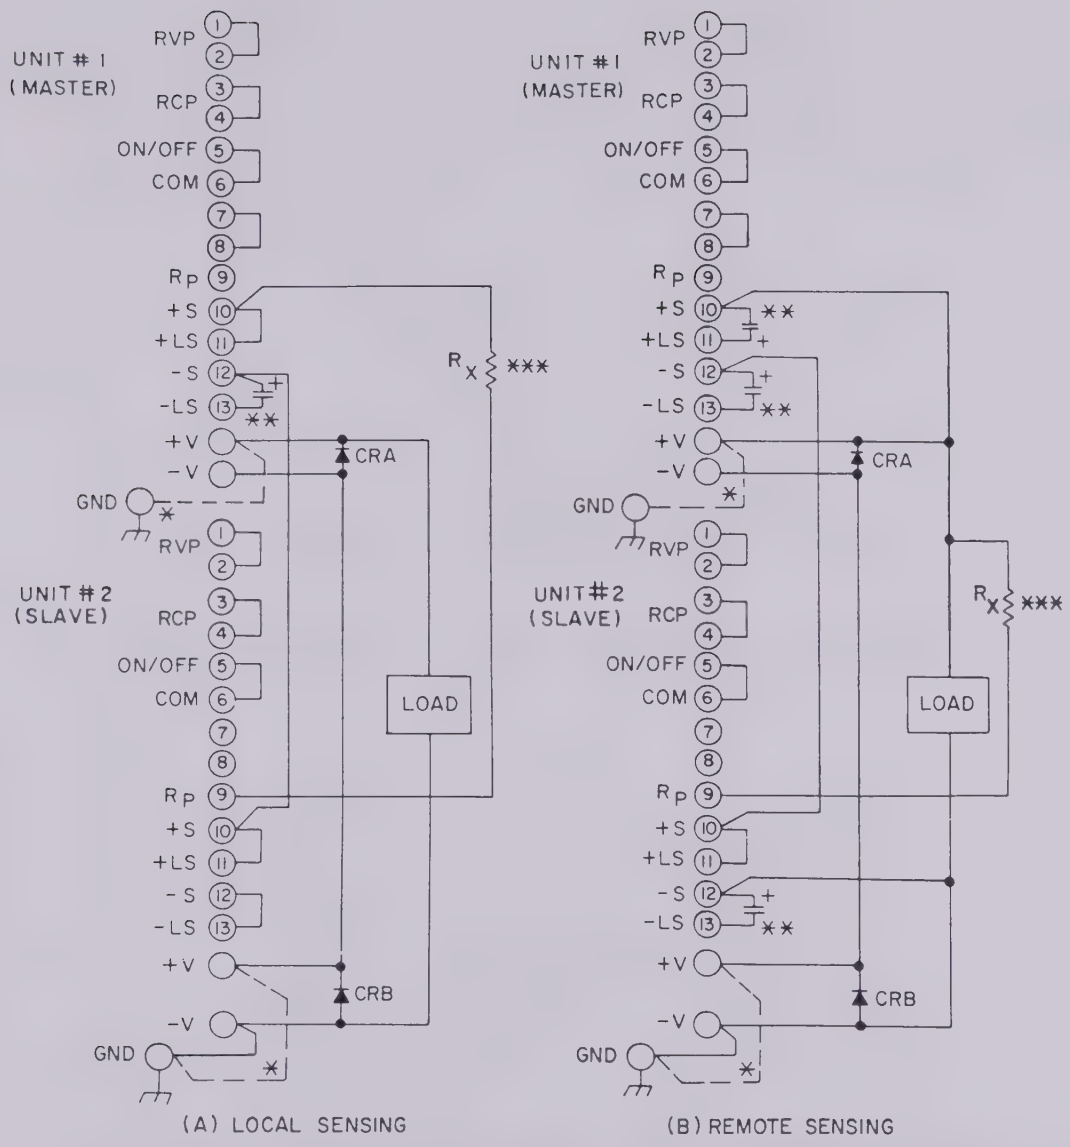

NOTE: * MAKE ONLY ONE GROUND CONNECTION FOR SERIES COMBINATION. TO CHANGE GROUND AS SHOWN, REMOVE JUMPER FROM -V TO GND AND RECONNECT AS DESIRED.

** A 2.5UF ELECTROLYTIC CAP. MAY BE REQUIRED.

*** SEE "SERIES OPERATION" SECTION FOR DETAILS OF R_X VALUES.

Figure 11. Series Connection.

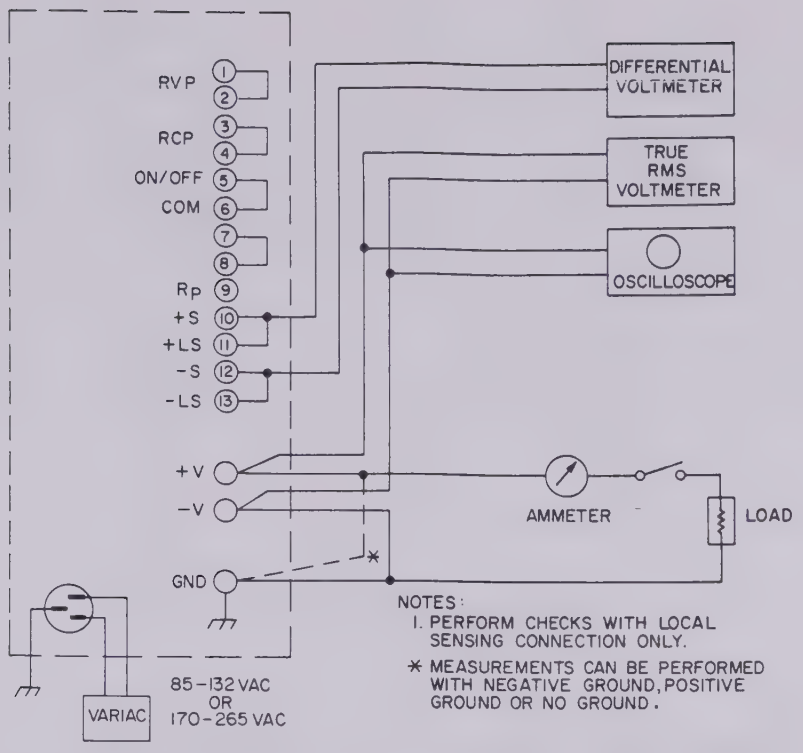

Figure 12. Test Connections for Constant Voltage Performance Checks.

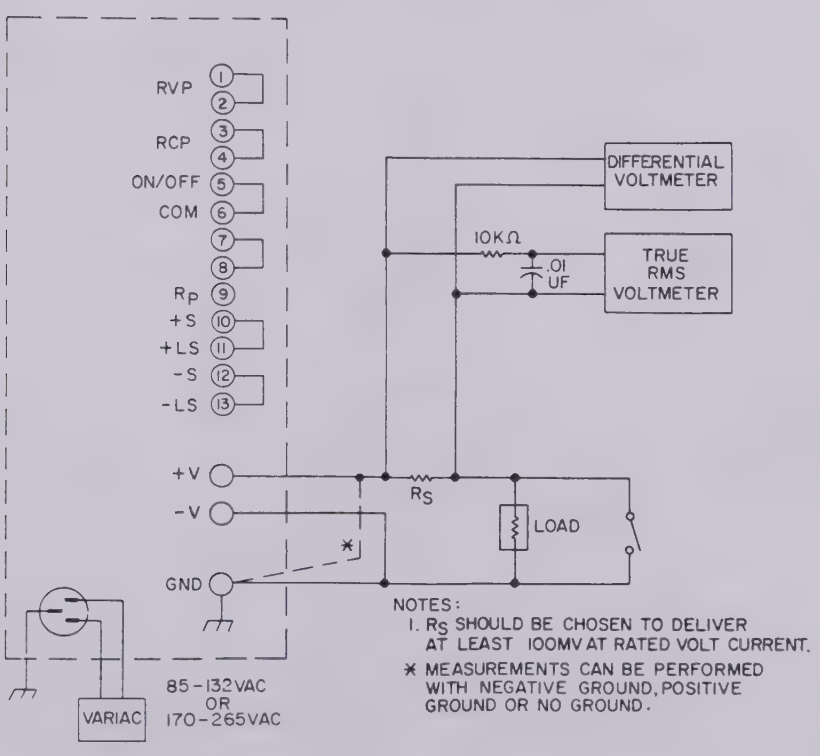

Figure 13. Test Connections for Constant Current Performance Checks.

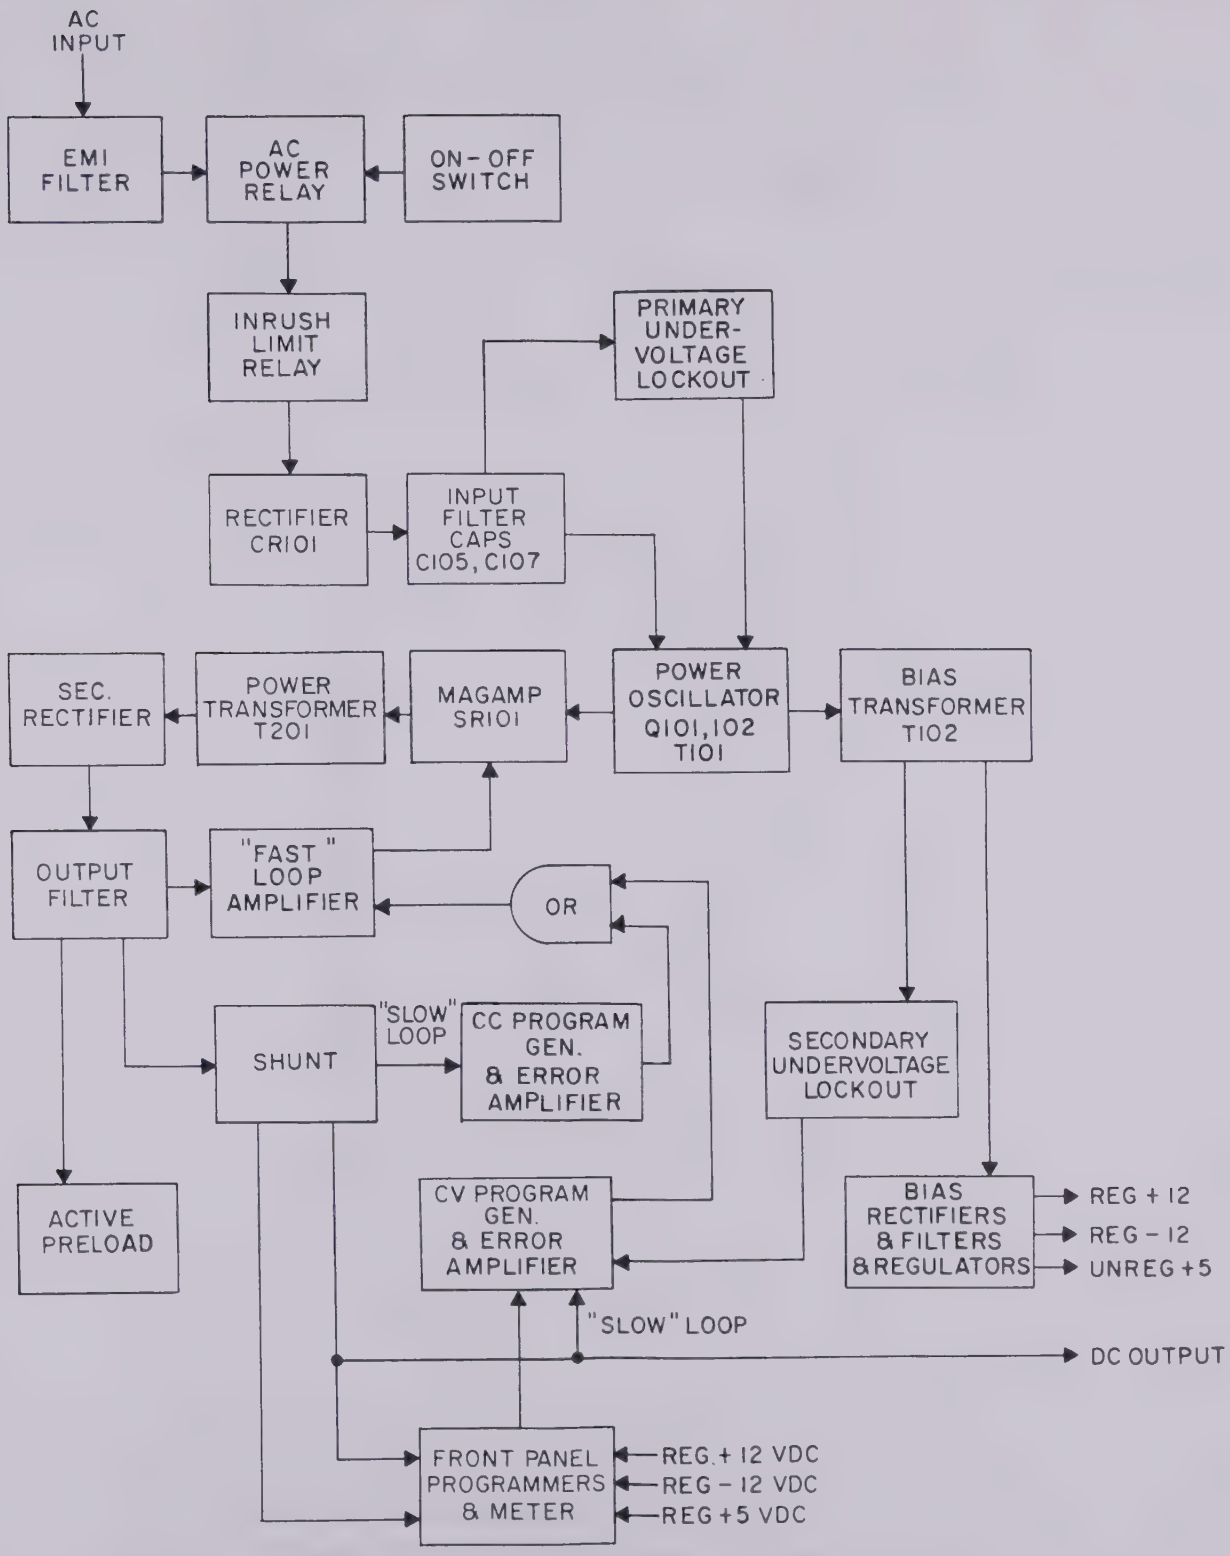

Figure 14. Block Diagram.

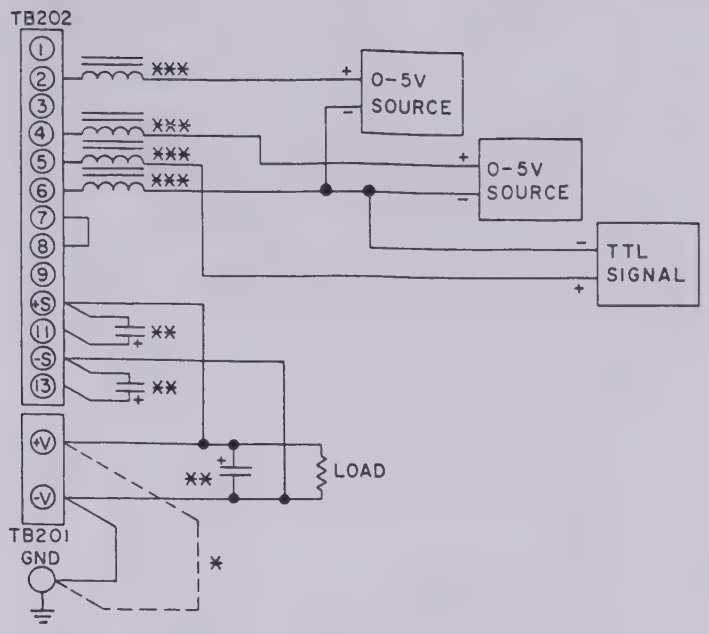

(A) REMOTE VOLTAGE PROGRAMMING (PIN 2), REMOTE CURRENT PROGRAMMING (PIN 4), REMOTE ON/OFF (PINS 5,6), REMOTE SENSE.

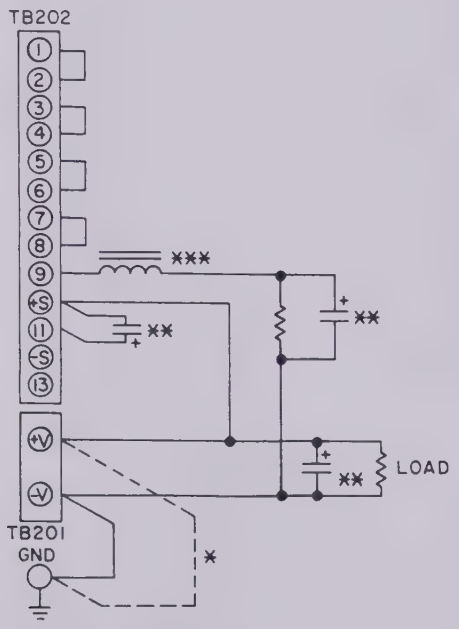

(B) REMOTE RESISTANCE PROGRAMMING (PIN 9), REMOTE SENSE.

NOTE: * FOR POSITIVE GROUND DISCONNECT JUMPER FROM -V TO GND AND RECONNECT FROM +V TO GND.

** A 2.5UF ELECTROLYTIC CAP MAY BE REQUIRED.

*** NOISE SUPPRESSOR IS 8 TURNS ON FAIR RITE PRODUCTS CORP. CORE NO. 5961001103 AND IS CONNECTED WITHIN 3" OF POWER SUPPLY TERMINALS.

Figure 15. Application of Noise Suppressors in Remote Applications Where Extremely Low Noise is Required

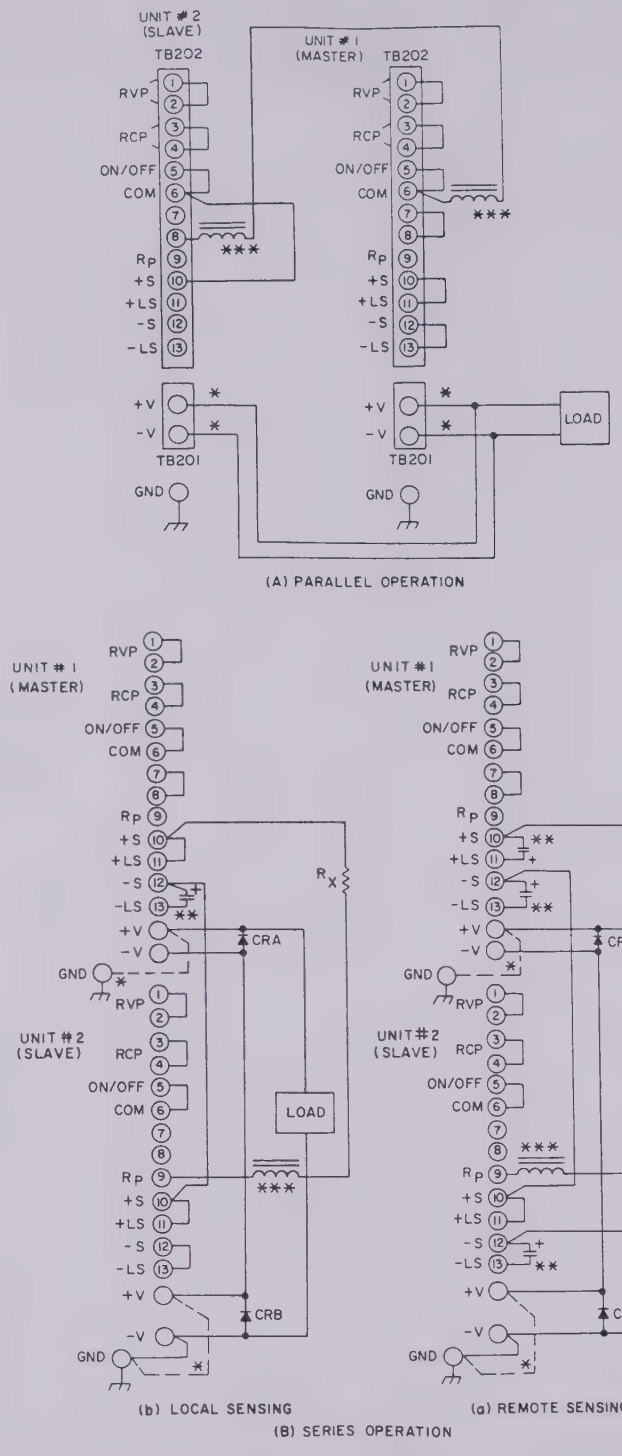

NOTE : * MAKE ONLY ONE GROUND CONNECTION FOR SERIES COMBINATION. TO CHANGE GROUND AS SHOWN, REMOVE JUMPER FROM -V TO GND AND RECONNECT AS DESIRED.

** A 2.5UF ELECTROLYTIC CAP. MAY BE REQUIRED.

*** NOISE SUPPRESSOR IS 8 TURNS ON FAIR RITE PRODUCTS CORP. CORE NO. 5961001103 AND IS CONNECTED WITHIN 3" OF POWER SUPPLY TERMINALS.

Figure 16. Application of Noise Suppressors in Parallel And Series Operation Where Low Noise is Required

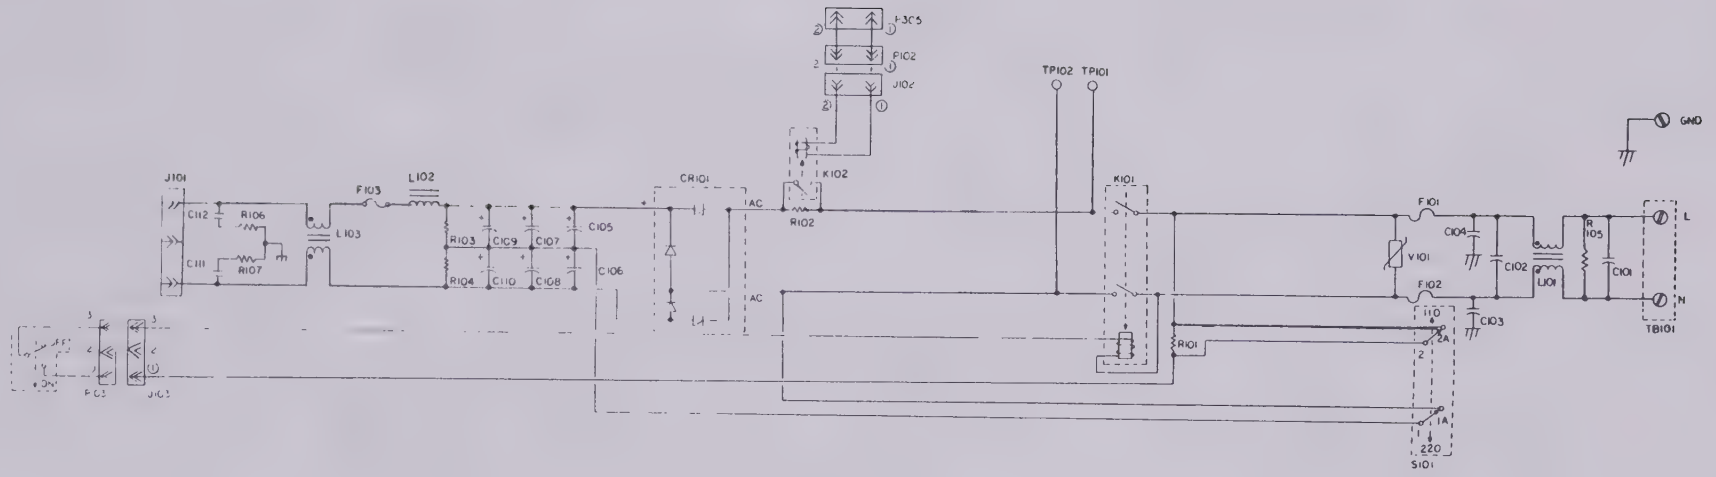

REQ'D	PART NO	ITEM	DESCRIPTION	MAT'L OR MFR	MAT'L SPEC OR CAT NO OR DRAWING

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES AND TOLERANCES AS FOLLOWS
DEC ± .XX FRACTIONS ± 1/64 ANGLES ± 1°

LIST OF MATERIAL

MATERIAL: PRELIMINARY

FINISH:

	SIGNATURE	DATE
DR	J. Z	11-17
CHK		87
ENGR		
APPD		

TITLE: LLS/LMS 9000 "A" BOARD

LAMBDA ELECTRONICS
MELVILLE, N.Y.

USED ON | NEXT ASS'Y

APPLICATION

SIZE D

SCALE

LAMBDA PART NO. & DWG. NO.

REV

SHEET

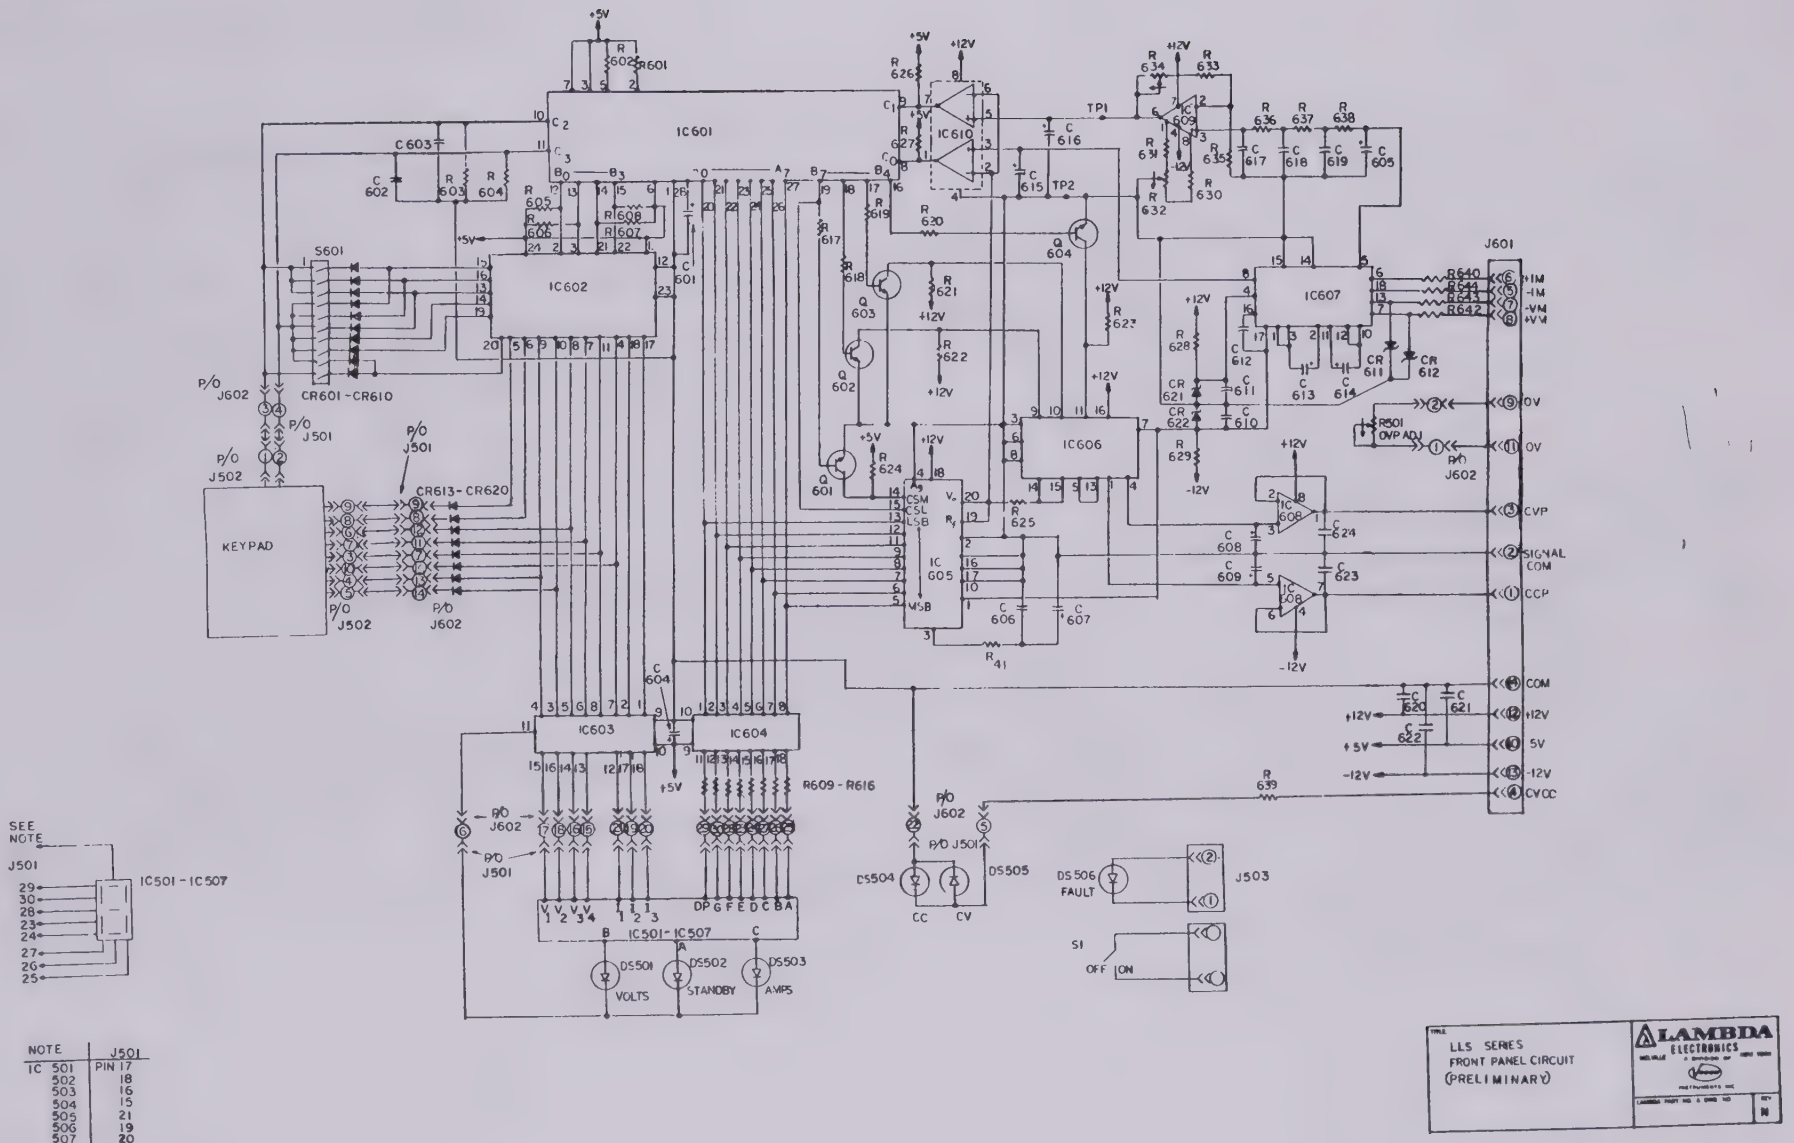

NOTE	J501
IC 501	PIN 17
502	18
503	16
504	15
505	21
506	19
507	20

LLS SERIES
FRONT PANEL CIRCUIT
(PRELIMINARY)

LAMBDA ELECTRONICS

REV N

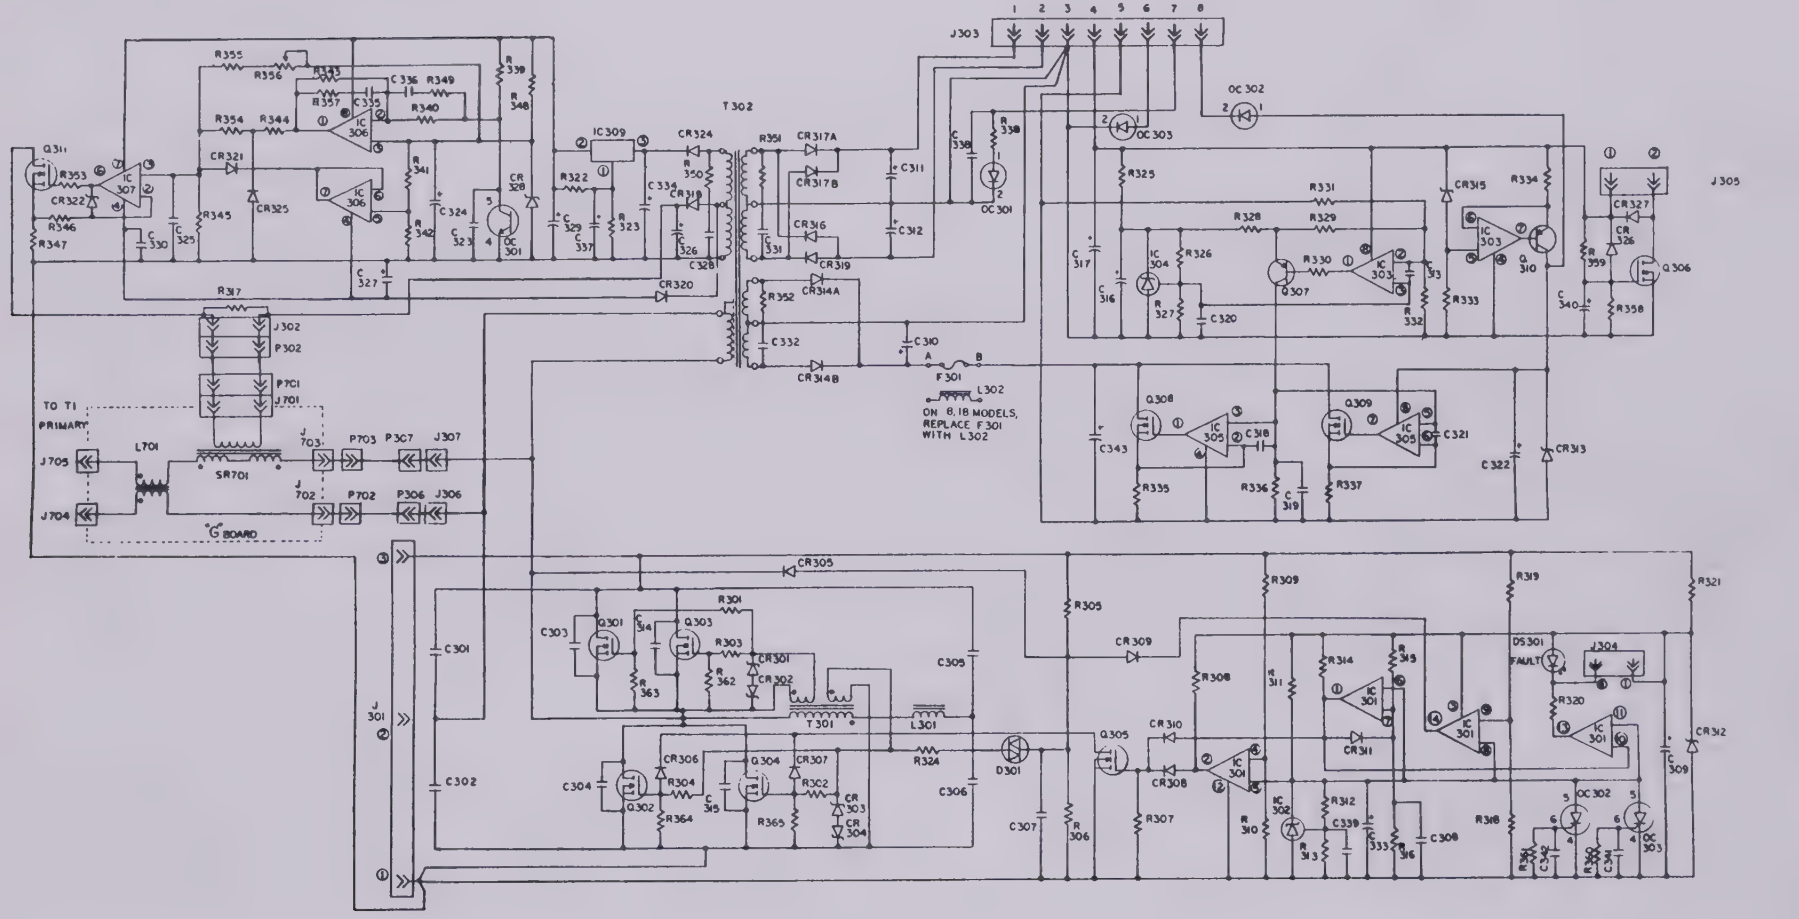

CODE	PART NO	REV	DESCRIPTION	QUAN. PER ASSY	QUAN. USED ON	ASSY. OR CAT. NO. OR DRAWING			
			LIST OF MATERIAL						
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES AND TOLERANCES AS FOLLOWS DEC. ± .005 FRACTIONS ± 1/64 ANGLES ± 1/2°			MATERIAL	PRELIMINARY		FINISH			
			DRAWN	DR RSD	DATE 1/75	TITLE LMS/LLS 9000 "C" BOARD SCHEMATIC INCLUDES "G" BOARD		LAMBDA ELECTRONICS	
			CHK						
			ENGR						
			APPD						
USED ON		NEXT ASSY							
APPLICATION						SCALE		SHEET	
SIZE D									

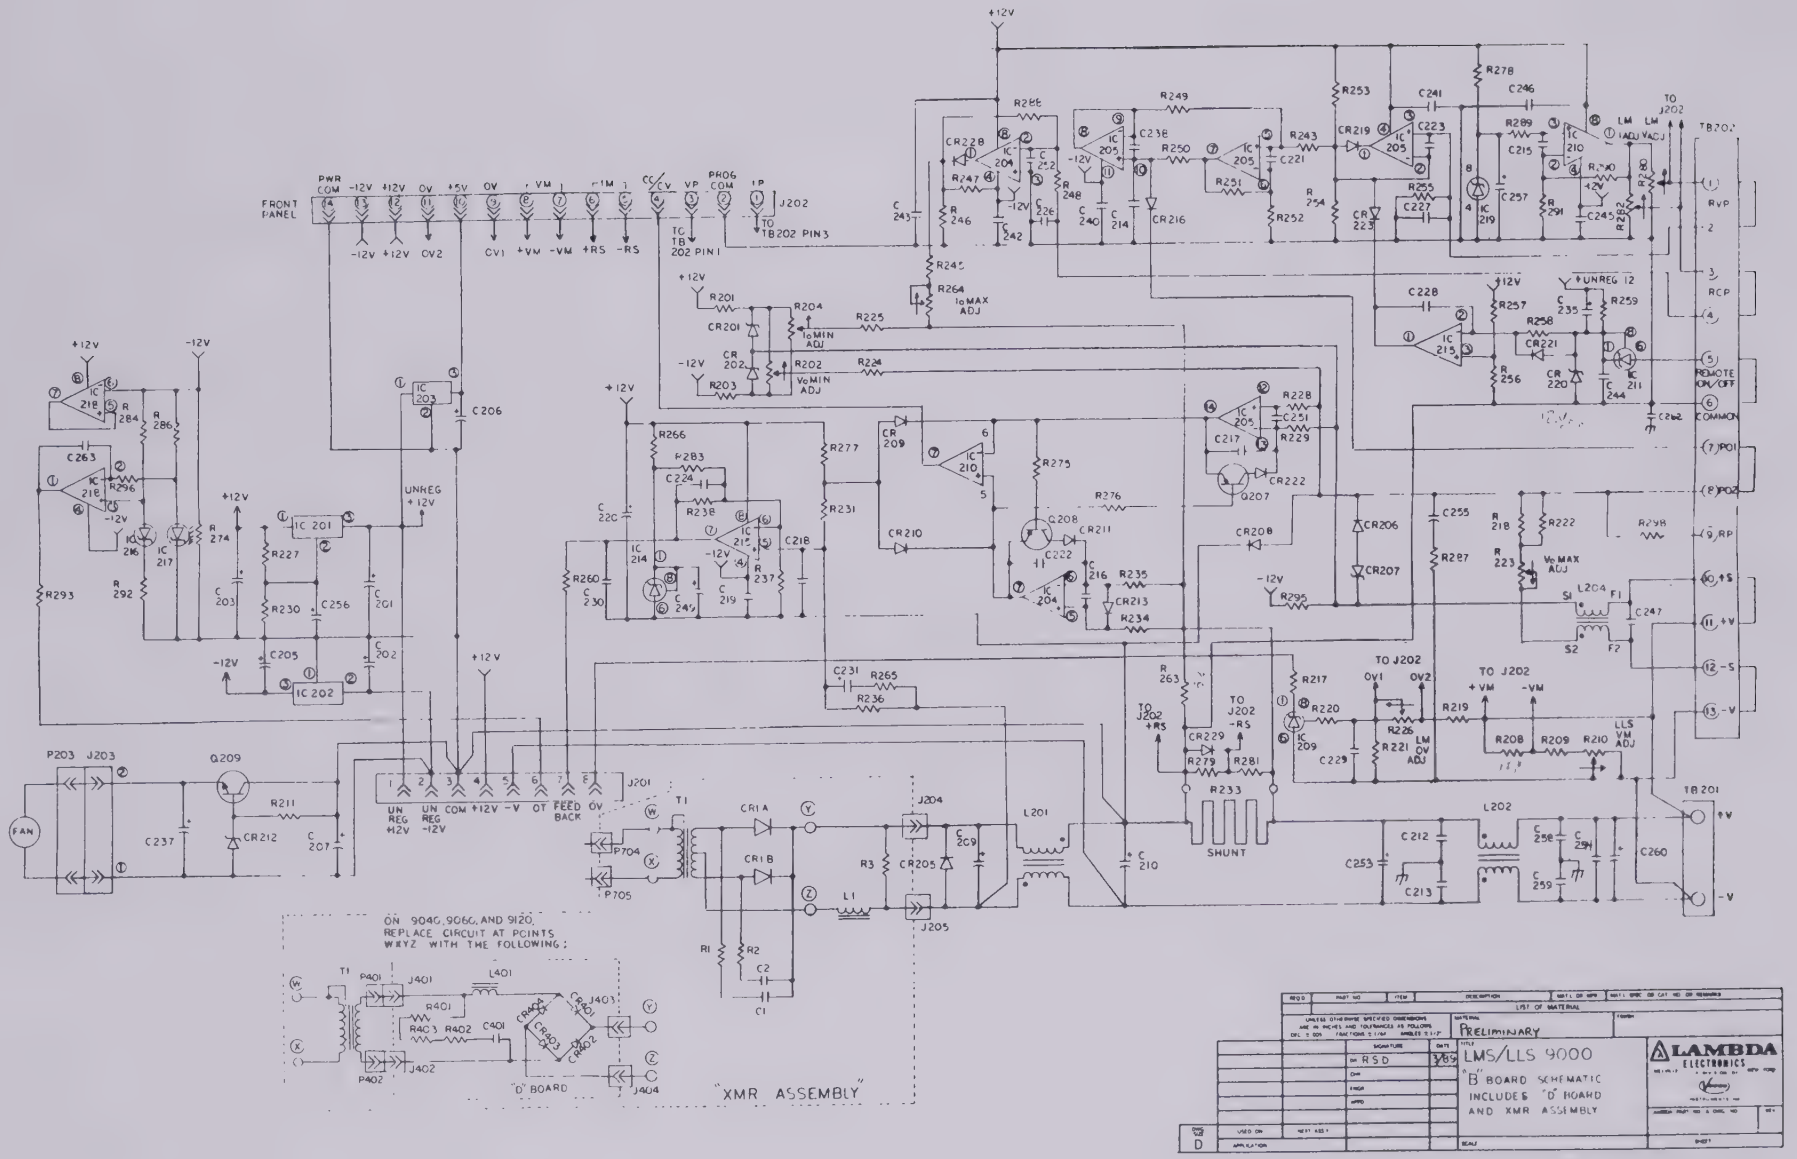
FRONT PANEL
PWR COM
-12V
+12V
OV
+5V
OV
+VM
-VM
+RS
-RS
CC
CV
VP
PROG COM
IP
J202
TO TB202 PIN3
TO TB 202 PIN1
-12V +12V OV2
CV1 +VM -VM +RS -RS
+12V
-12V
UNREG +12V
UNREG +12V
UNREG -12V
COM +12V -V OT FEED BACK
OV
J201
P203 J203
FAN
Q209
CR212
C237
C207
R211
T1
P704
P705
CR1A
CR1B
R1
R2
C1
C2
R3
L1
J204
J205
CR205
C209
L201
C210
SHUNT
TO J202 +RS
TO J202 -RS
TO J202 OV1
TO J202 OV2
TO J202 +VM
TO J202 -VM
R263
R217
R220
IC 209
R219
R226
R221
LM OV ADJ
R208
R209
R210
LLS VM ADJ
C229
R233
R279
R281
CR229
L202
C212
C253
C213
C258
C259
C254
C260
TB201
+V
-V
TB202
RVP
RCP
REMOTE ON/OFF
COMMON
PO1
PO2
RP
+S
+V
-S
-V
R278
C241
C246
R253
R249
R243
CR219
IC 205
IC 210
LM ADJ
LM ADJ
R289
R290
R280
C215
C223
C257
C245
IC 219
R291
R282
R284
R286
R296
IC 218
IC 216
IC 217
R274
R292
R293
C263
C203
C201
C202
C205
C256
R227
R230
IC 201
IC 202
IC 203
C206
R266
R283
C224
R238
IC 214
IC 215
C220
C218
R277
R231
CR209
CR210
R275
R276
Q208
CR211
C222
C216
R235
CR213
R234
R260
C230
C219
R237
R228
C251
R229
C217
CR222
Q207
CR208
CR206
CR207
R255
R287
R218
R222
R223
Vo MAX ADJ
R298
L204
S1
S2
F1
F2
C247
R295
C255
C231
R265
R236
R201
CR201
R204
Io MIN ADJ
CR 202
R202
Vo MIN ADJ
R203
R225
R224
R264
Io MAX ADJ
R245
C243
R246
R247
R248
C226
C242
C240
C238
C214
C221
C222
R250
R251
R252
R254
CR216
CR223
C227
R255
C228
R257
R258
C235
R259
UNREG 12
CR221
R256
IC 211
C244
C262
C246
C247
C248
C249
C250
C252
C255
C256
C257
C258
C259
C260
C261
C262
C263
C264
C265
C266
C267
C268
C269
C270
C271
C272
C273
C274
C275
C276
C277
C278
C279
C280
C281
C282
C283
C284
C285
C286
C287
C288
C289
C290
C291
C292
C293
C294
C295
C296
C297
C298
C299
C300
C301
C302
C303
C304
C305
C306
C307
C308
C309
C310
C311
C312
C313
C314
C315
C316
C317
C318
C319
C320
C321
C322
C323
C324
C325
C326
C327
C328
C329
C330
C331
C332
C333
C334
C335
C336
C337
C338
C339
C340
C341
C342
C343
C344
C345
C346
C347
C348
C349
C350
C351
C352
C353
C354
C355
C356
C357
C358
C359
C360
C361
C362
C363
C364
C365
C366
C367
C368
C369
C370
C371
C372
C373
C374
C375
C376
C377
C378
C379
C380
C381
C382
C383
C384
C385
C386
C387
C388
C389
C390
C391
C392
C393
C394
C395
C396
C397
C398
C399
C400
C401
C402
C403
C404
C405
C406
C407
C408
C409
C410
C411
C412
C413
C414
C415
C416
C417
C418
C419
C420
C421
C422
C423
C424
C425
C426
C427
C428
C429
C430
C431
C432
C433
C434
C435
C436
C437
C438
C439
C440
C441
C442
C443
C444
C445
C446
C447
C448
C449
C450
C451
C452
C453
C454
C455
C456
C457
C458
C459
C460
C461
C462
C463
C464
C465
C466
C467
C468
C469
C470
C471
C472
C473
C474
C475
C476
C477
C478
C479
C480
C481
C482
C483
C484
C485
C486
C487
C488
C489
C490
C491
C492
C493
C494
C495
C496
C497
C498
C499
C500
C501
C502
C503
C504
C505
C506
C507
C508
C509
C510
C511
C512
C513
C514
C515
C516
C517
C518
C519
C520
C521
C522
C523
C524
C525
C526
C527
C528
C529
C530
C531
C532
C533
C534
C535
C536
C537
C538
C539
C540
C541
C542
C543
C544
C545
C546
C547
C548
C549
C550
C551
C552
C553
C554
C555
C556
C557
C558
C559
C560
C561
C562
C563
C564
C565
C566
C567
C568
C569
C570
C571
C572
C573
C574
C575
C576
C577
C578
C579
C580
C581
C582
C583
C584
C585
C586
C587
C588
C589
C590
C591
C592
C593
C594
C595
C596
C597
C598
C599
C600
C601
C602
C603
C604
C605
C606
C607
C608
C609
C610
C611
C612
C613
C614
C615
C616
C617
C618
C619
C620
C621
C622
C623
C624
C625
C626
C627
C628
C629
C630
C631
C632
C633
C634
C635
C636
C637
C638
C639
C640
C641
C642
C643
C644
C645
C646
C647
C648
C649
C650
C651
C652
C653
C654
C655
C656
C657
C658
C659
C660
C661
C662
C663
C664
C665
C666
C667
C668
C669
C670
C671
C672
C673
C674
C675
C676
C677
C678
C679
C680
C681
C682
C683
C684
C685
C686
C687
C688
C689
C690
C691
C692
C693
C694
C695
C696
C697
C698
C699
C700
C701
C702
C703
C704
C705
C706
C707
C708
C709
C710
C711
C712
C713
C714
C715
C716
C717
C718
C719
C720
C721
C722
C723
C724
C725
C726
C727
C728
C729
C730
C731
C732
C733
C734
C735
C736
C737
C738
C739
C740
C741
C742
C743
C744
C745
C746
C747
C748
C749
C750
C751
C752
C753
C754
C755
C756
C757
C758
C759
C760
C761
C762
C763
C764
C765
C766
C767
C768
C769
C770
C771
C772
C773
C774
C775
C776
C777
C778
C779
C780
C781
C782
C783
C784
C785
C786
C787
C788
C789
C790
C791
C792
C793
C794
C795
C796
C797
C798
C799
C800
C801
C802
C803
C804
C805
C806
C807
C808
C809
C810
C811
C812
C813
C814
C815
C816
C817
C818
C819
C820
C821
C822
C823
C824
C825
C826
C827
C828
C829
C830
C831
C832
C833
C834
C835
C836
C837
C838
C839
C840
C841
C842
C843
C844
C845
C846
C847
C848
C849
C850
C851
C852
C853
C854
C855
C856
C857
C858
C859
C860
C861
C862
C863
C864
C865
C866
C867
C868
C869
C870
C871
C872
C873
C874
C875
C876
C877
C878
C879
C880
C881
C882
C883
C884
C885
C886
C887
C888
C889
C890
C891
C892
C893
C894
C895
C896
C897
C898
C899
C900
C901
C902
C903
C904
C905
C906
C907
C908
C909
C910
C911
C912
C913
C914
C915
C916
C917
C918
C919
C920
C921
C922
C923
C924
C925
C926
C927
C928
C929
C930
C931
C932
C933
C934
C935
C936
C937
C938
C939
C940
C941
C942
C943
C944
C945
C946
C947
C948
C949
C950
C951
C952
C953
C954
C955
C956
C957
C958
C959
C960
C961
C962
C963
C964
C965
C966
C967
C968
C969
C970
C971
C972
C973
C974
C975
C976
C977
C978
C979
C980
C981
C982
C983
C984
C985
C986
C987
C988
C989
C990
C991
C992
C993
C994
C995
C996
C997
C998
C999
C1000
ON 9040, 9060, AND 9120, REPLACE CIRCUIT AT POINTS WXYZ WITH THE FOLLOWING:
T1
P401
J401
L401
R401
R403
R402
C401
CR401
CR402
CR403
CR404
J403
J402
P402
"D" BOARD
J404
"XMR ASSEMBLY"
PRELIMINARY
LMS/LLS 9000
"B" BOARD SCHEMATIC INCLUDES "D" BOARD AND XMR ASSEMBLY
LAMBDA ELECTRONICS
D

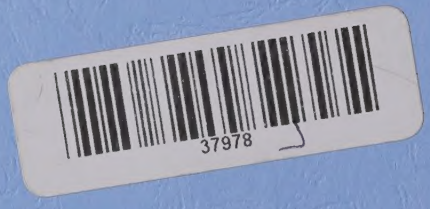
37978

MP MASTER
MA28687